User's Guide

RIGOL

Publication number: UGC01107-1110 Dec. 2008

DM3000 Series Digital Multimeter

DM3061/2/4

DM3051/2/4

 \odot 2007 RIGOL Technologies, Inc. All Rights Reserved

- © 2007 **RIGOL** Technologies, Inc. All Rights Reserved.
- **RIGOL** products are protected by patent law in and outside of P.R. China.
- Information in this publication replaces all previously corresponding material.
- **RIGOL** Technologies, Inc. reserves the right to modify or change part of or all the specifications and pricing policies at company's sole decision.

NOTE: RIGOL is registered trademark of **RIGOL** TECHNOLOGIES, INC.

Safety Notices

Review the following safety precautions carefully before operating the instrument to avoid any personal injuries or damages to the instrument and any products connected to it.

To avoid potential hazards use the instrument as specified by this user's guide only.

The instrument should be serviced by qualified personnel only.

To Avoid Fire or Personal Injury.

Use Proper Power Cord. Use the power cord designed for the instrument as authorized in your country only.

Ground The Instrument. The instrument is grounded through the grounding conductor of the power cord. To avoid electric shock the instrument grounding conductor(s) must be grounded properly before making connections to the input or output terminals of the instrument.

Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and marks on the instrument. Follow the user's guide for further ratings information before making connections to the instrument.

Do Not Operate Without Covers. Do not operate the instrument with covers or panels **removed**.

Use Proper Fuse. Use the fuse of the type, voltage and current ratings as specified for the instrument.

Avoid Circuit or Wire Exposure. Do not touch exposed connections and components when power is on.

Do Not Operate With Suspected Failures. If suspected damage occurs with the instrument, have it inspected by qualified service personnel before further operations.

Do Not Operate in Wet/Damp Conditions.

Do Not Operate in an Explosive atmosphere.

Keep Product Surfaces Clean and Dry.

The disturbance test of all the models meet the limit values of A in the standard of EN 61326: 1997+A1+A2+A3, but can't meet the limit values of B.

WARNING

IEC Measurement Category II. The HI and LO input terminals may be connected to mains in IEC Category II installations for line voltages up to 300 VAC. To avoid the danger of electric shock, do not connect the inputs to mains for line voltages above 300 VAC.

Protection Limits: To avoid instrument damage and the risk of electric shock, do not exceed any of the Protection Limits defined in the following section.

IEC Measurement Category II Overvoltage Protection

To protect against the danger of electric shock, the **RIGOL** DM3000 series Digital Multimeter provides overvoltage protection for line-voltage mains connections meeting both of the following conditions: The HI and LO input terminals are connected to the mains under Measurement Category II conditions, defined below, and The mains are limited to a maximum line voltage of 300 VAC. IEC Measurement Category II includes electrical devices connected to mains at an outlet on a branch circuit.

Such devices include most small appliances, test equipment, and other devices that plug into a branch outlet or socket. The DM3000 series Digital Multimeter may be used to make measurements with the HI and LO inputs connected to mains in such devices, or to the branch outlet itself (up to 300 VAC). However, the DM3000 series Digital Multimeter may not be used with its HI and LO inputs connected to mains in permanently installed electrical devices such as the main circuit-breaker panel, sub-panel disconnect boxes, or permanently wired motors. Such devices and circuits are subject to overvoltage that may exceed the protection limits of the DM3000 series Digital Multimeter.

Note: Voltages above 300 VAC may be measured only in circuits that are isolated from mains. However, transient overvoltage are also present on circuits that are isolated from mains. The DM3000 series Digital Multimeter is designed to safely withstand occasional transient overvoltage up to 2500 Vpk. Do not use this equipment to measure circuits where transient overvoltage could exceed this level.

Safety Terms and Symbols

Terms in This Guide. These terms may appear in this guide:



WARNING: Warning statements identify conditions or practices that could result in injury or loss of life.



CAUTION: Caution statements identify conditions or practices that could result in damage to this product or other property.



CAT II (300V): IEC Measurement Category II. Inputs may be connected to mains (up to 300 VAC) under Category II overvoltage conditions.

Terms on the Product: These terms may appear on the product:

DANGER indicates an injury hazard may happen immediately.

WARNING indicates an injury hazard may not happen immediately.

CAUTION indicates that a potential damage to the instrument or other property might occur.

Symbols on the Product: These symbols may appear on the Instrument:

 \triangle



Hazardous Voltage

Refer to Instructions

Protective Earth Terminal

Chassis Ground

Earth Ground

General-Purpose Multimeter

The book covers the following description and six models DM3000 Series Digital Multimeter:

DM3061, DM3062, DM3064; DM3051, DM3052, DM3054.

DM3000 Series Digital Multimeter naming rules:

		DM	30	6	1
Prefix desk	top Digital Multimeter				
Serial Num	ber				
6-61/2, 5-	-5¾ digit				
No					
1—Basic;	2-LAN/GPIB interfac	ce;			

4–Inspection plate with the model and LAN/GPIB interface.

Application examples:

DM3061 – $6\frac{1}{2}$ DM3000 series, Basic type.

DM3062 – 61/2 DM3000 series, Basic type, equipped with LAN/GPIB module.

 $\mathsf{DM3064}-\mathsf{61}\!/_2$ DM3000 series, Basic type, equipped with LAN/GPIB and inspection module.

DM3051 – $5\frac{3}{4}$ DM3000 series, Basic type.

DM3052 - 5³/₄ DM3000 series, Basic type, equipped with LAN/GPIB module.

 $\mathsf{DM3054}-\mathsf{534DM3000}$ series, Basic type, equipped with LAN/GPIB and inspection module.

RIGOL DM3000-Series Digital Multimeter is a equipment designed for high-precision, multifunction, automation measurements. The series includes 6¹/₂ digits multimeter, with high-speed data acquisition, automatic measurements, multiplexer, mathematical operations, and flexible user sensor configurations etc. Interface includes RS-232, USB, LAN, GPIB for disk storage and print.

The DM3000 has a high-resolution monochrome LCD display system for simple waveform display and recording. The concise and user-friendly layout of the front panel has a keyboard, and back lighted functional buttons, embedded with operating instructions makes the instrument more flexible, and capable. The 50kSa/s high data sampling rate allows to capture precision audio waveforms and high speed data. It has 2Mbyte of internal memory depth while the external memory depth is expandable as preferred. The AC voltage and current measurement is true RMS. It supports virtual terminal display and control, and remote network access.

With the performance and characteristics given below, you will understand how a DM3000 can satisfy your measurement requirements.

- 50kSa/s data sampling rate can be used, such as the rapidly changing high-precision audio waveform data. Meanwhile waveform can be displayed on LCD Screen
- Resolving Index: > 61/2 digits and 2,400,000 Count
- 24 measurement functions
 - ♦ DC voltage and current, AC voltage and current, two-wire and four-wire resistance, capacitance, continuity test, diode test, frequency, cycle, ratio measurements, sensor measurement, and so on.
 - ♦ Upper limit and lower limit on threshold measurement
 - ♦ Arithmetic include: maximum, minimum, limit, average, dBm, dB
 - ♦ Data acquisition functions include : data records, inspection, automatic measurement.
- True RMS AC voltage and current measurement
- 16-Channels inspection functional measurement and control software (optional)
- DC voltage >10G Ω input impedance to achieve the range of 48V (±24V)
- 10 groups measuring set-up storage and unlimited setup through PC interface

- 256 x 64 pixel monochrome LCD
- I/O: RS-232, USB, LAN and GPIB
- Built-in USB Host to support USB disk and USB printer
- Simple, convenient, flexible control software: Ultralogger, Ultrasensor and UltraDMM Supports for Microsoft® Windows 98/Me/2000/XP

Note: The chapter one, chapter two, chapter three will be described according to $6\frac{1}{2}$ digits. For $5\frac{3}{4}$ digits, please refer to 'Chapter five: Characteristics for DM306x''.

Content

	Safety Notices	II
	General-Purpose Multimeter	V
CH	APTER 1 QUICK START	1-1
	General Inspection	1-2
	Handle Adjustment	1-3
	The Front/Rear Panel and User Interface	1-4
	To Measure DC Voltage	1-6
	To Measure AC Voltage	1-8
	To Measure DC Current 1	-10
	To Measure AC Current 1	-12
	To Measure Resistance 1	-14
	To Measure Capacitance 1	-18
	To Test Continuity 1	-20
	To Check Diodes 1	-22
	To Measure Frequency and Period 1	-24
	To Measure Sensor 1	-28
	To Choose Reading Resolution1	-34
	To Choose Data Digit Display 1	-35
	To Choose Range Options	-36
	5	
	To Control Trigger Options 1	-38
СН	To Control Trigger Options	-38 2-1
СН	To Control Trigger Options	-38 2-1 2-2
СН	To Control Trigger Options	-38 2-1 2-2 -12
CH	To Control Trigger Options	-38 2-1 2-2 -12 -19
CH	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2	-38 2-1 2-2 -12 -19 -27
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2	-38 2-1 -12 -19 -27 -32
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2	-38 2-1 -12 -19 -27 -32 -48
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2	-38 2-1 -12 -19 -27 -32 -48 -56
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2	-38 2-1 -12 -19 -27 -32 -48 -56 -64
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 APTER 3 APPLICATION EXAMPLES 3	-38 2-1 2-2 -12 -19 -27 -32 -48 -56 -64 3-3
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 1 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 APTER 3 APPLICATION EXAMPLES 2 Example 1: Reading Statistic Functions 2	-38 2-1 -12 -19 -27 -32 -48 -56 -64 3-3 3-3
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 2 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 APTER 3 APPLICATION EXAMPLES 2 Example 1: Reading Statistic Functions 2 Example 2: Elimination Leads Resistance Error 2	-38 2-1 -12 -19 -27 -32 -48 -56 -64 3-3 3-3 3-5
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 2 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 Example 1: Reading Statistic Functions 2 Example 2: Elimination Leads Resistance Error 2	-38 2-2 -12 -19 -27 -32 -48 -56 -64 3-3 3-5 3-5 3-6
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 2 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 APTER 3 APPLICATION EXAMPLES 2 Example 1: Reading Statistic Functions 2 Example 2: Elimination Leads Resistance Error 2 Example 3: dBm Measurement 2	-38 2-1 -12 -19 -27 -32 -48 -56 -64 3-3 3-5 3-6 3-7
СН	To Control Trigger Options 1 APTER 2 OPERATING YOUR MULTIMETER 1 To Set up Measurement Parameters 2 Math Functions 2 To Set Up Triggering Parameter Function 2 Store and Recall 2 To Set Up the Utility 2 High-Speed Data Log 2 Multi-Route Scanning 2 How to Use the Built-in Help System 2 APTER 3 APPLICATION EXAMPLES 2 Example 1: Reading Statistic Functions 2 Example 2: Elimination Leads Resistance Error 2 Example 3: dBm Measurement 2 Example 4: dB Measurement (2) © 2007 RIGOL Technologies. Inc.	-38 2-1 -12 -19 -27 -32 -48 -56 -64 3-3 3-5 3-6 3-7

Example 5: Limit Test	3-9
Example 6: Temperature Sensor	3-10
Example 7: Reading Hold	3-15
CHAPTER 4 PROMPT MESSAGES& TROUBLESHOOTING	4-1
Prompting Message	4-1
Troubleshooting	4-3
CHAPTER 5 CHARACTERISTICS	5-1
Characteristics for DM306x	5-1
Characteristics for DM305x	5-11
CHAPTER 6 APPENDIX	6-1
Appendix A: DM3000 Series Accessories	6-1
Appendix B: Warranty	6-2
Appendix C: General Care and Cleaning	6-3
Appendix D: Contact RIGOL	6-4

Chapter 1 Quick Start

This chapter covers the following topics:

- General Inspection
- Handle Adjustment
- The Front Panel and User Interface
- To Measure DC Voltage
- To Measure AC Voltage
- To Measure DC Current
- To Measure AC Current
- To Measure Resistance
- To Measure Capacitance
- To Test Continuity
- To Check Diodes
- To Measure Frequency and Period
- To Make an Sensor measurement
- To Choose Digits resolving index
- To Choose Data Digit Display
- To Choose Range Options
- To Control Trigger Options

General Inspection

Inspect a new DM3000 Digital Multimeter with the following steps:

1. Inspect the shipping container for damage.

Keep the damaged shipping container or cushioning material until the contents of the shipment have been checked for completeness and the instrument has been checked mechanically and electrically.

2. Check the accessories.

Accessories supplied with the instrument are listed in "Accessories" at Appendix B of this guide.

If the contents are incomplete or damaged, please notify the **RIGOL** Sales Representative.

3. Inspect the instrument.

In case of any damage, or defect, or failure, notify the **RIGOL** Sales Representative. If the shipping container is damaged, or the protective material shows signs of stress, notify the carrier as well as your **RIGOL** sales office. Keep the shipping materials for the carrier's inspection.

RIGOL offices will arrange reparation or replacement at **RIGOL**'s option without waiting for claim settlement.

Handle Adjustment

To adjust the handle position of DM3000 Digital Multimeter, please grip the handle by the sides and pull it outward. Then, rotate the handle to the desired position as shown in Figure 1- 1, Figure 1- 2.



Figure 1-1



Figure 1- 2 Viewing Positions and Carrying Position

The Front/Rear Panel and User Interface

It is important to get familiar with the front panel of a new DM3000. This chapter gives an introduction of the operation and functions of the Front Panel.

The front panel of the DM3000 is user friendly as shown below. It includes 4 Direction buttons and 12 Function keys, 6 Menu keys and 2 Control keys as shows below:



Figure 1-3 The Front Panel



Figure 1- 5 The Interface Explanation

How the definitions express in this book:

In this manual, the regarding keys writing expression has the same log with the keys on the front panel. It is noteworthy that the menu operates keys, marking with the

belt shadow. For example, Conti indicates the short circuit option in menu (Meas).

To Measure DC Voltage

The following shows the system connections and selection of measurement functions. This practice provides a guide to get familiar with the DC Voltage measurement technique.



Figure 1- 6 DC Voltage Measurement Data Interface

Table1- 1 DC Voltage Measurement Characteristics

Five Ranges	200mV, 2V, 20V, 200V, 1000V
Max Resolution	100nV
Input Protection	1000V on all ranges (HI Terminal)
Configurable Parameters	Range, DC impedance, Null value

Basic measurement:

- 1. Connect the test leads as shown in Figure 1-7; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press (\overline{mv}) to select the DC Voltage measurement function.
- 3. Choose the appropriate measurement range.
- 4. Setup the DC impedance.

Press $\stackrel{\text{Meas}}{\rightarrow}$ Res, to setup the DC input impedance (Default value: 10M Ω).

5. Set the Null value.

Null computing will be an option operation, it could be setup in accordance with user demand. If user does not implement Null computing, this parameter is not required. (To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)Lead

test leads into circuit and start to measure.



Figure 1-7 DC Voltage Measurement

Use history function.
 Press History, the menu shows as below:

Measurement	DCV
Range	200mV
Records	127
Info List (HistoG)Update)Save 🗋 🖃

Figure 1-8 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

Note

Select Auto range if the measurement range is uncertain to get more accurate measurement data.

To Measure AC Voltage

The following shows the system connections and selection of measurement functions. This practice provides a guide to get familiar with the AC Voltage measurement technique. (The AC functions only support $5\frac{1}{2}$ digits measurement.)



Figure 1-9 AC Voltage Measurement Data Interface

Table1- 2 AC Voltage Measurement Characteristics
--

Five Ranges	200mV, 2V, 20V, 200V, 750V
Max Resolution	100nV
Input Protection	750VRMS on all ranges (HI Terminal)
Configurable Parameters	Range, AC Filter, Null value

Steps:

- 1. Connect test leads as shown in Figure 1- 10; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press $(\sim v)$ to select the AC Voltage measurement function.
- 3. Choose the appropriate measurement range.
- 4. Setup the AC Filter.

Press $\stackrel{\text{(Meas)}}{\rightarrow}$ Filter, to setup the AC Filter Bandwidth (Default value: Mid).

5. Set the Null value.

Null computing will be an option operation, could be setup in accordance with user demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

6. Lead test leads into circuit and start to measure.



Figure 1- 10 AC Voltage Measurement

Use history function.
 Press History, the menu shows as below:

Measurement	ACV
Range	200mV
Records	54
Info List HistoG	Update Save

Figure 1- 11 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

To Measure DC Current

The following shows the system connections and selection of measurement functions. This practice provides a guide to get familiar with the DC Current measurement technique.



Figure 1- 12 DC Current Measurement Data Interface

Five Ranges	2mA, 20mA, 200mA, 1A, 10A	
Max Resolution	10nA	
Input Protection	10A, 250V Current Input Fuse on rear panel	
Configurable Parameters	Range, Null value	

Steps:

- 1. Connect test leads as shown in Figure 1- 13; red test lead to the HI Terminal, black test lead to the LO terminal.
- 2. Press $\overline{\square}$ to select the DC Current measurement function.
- 3. Choose the appropriate measurement range.
- 4. Set the Null value.

Null computing will be an option operation, could be setup in accordance with user demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

5. Lead test leads into circuit, start to measure.



Figure 1-13 DC Current Measurement

6. Use history function.Press History, the menu shows as below:

Measurement	DCI
Range	2mA
Records	42
Info List HistoG)Update)Save 🛛 🖃

Figure 1-14 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

To Measure AC Current

The following shows the system connections and selection of measurement functions. The practice provides as guide to be familiar with the AC Current measurement technique. (The AC functions only support $5\frac{1}{2}$ digits measurement.)



Figure 1- 15 AC Current Measurement Data Interface

Table1- 4 AC Current Measurement Characteristics

Five Ranges	20mA, 200mA, 1A, 10A	
Max Resolution	100nA	
Input Protection	10A, 250V Current Input Fuse on rear panel	
Configurable Parameters	Range, AC Filter, Null value	

Steps:

- 1. Connect test leads as shown in Figure 1- 16; red test lead to the HI Terminal, black test lead to LO Terminal.
- 2. Press \frown ^I to select the AC Current measurement function.
- 3. Choose the appropriate measurement range.
- 4. Setup the AC Filter.

Press $\stackrel{\text{Meas}}{\rightarrow}$ Filter, to setup the AC Filter Bandwidth (Default value: "Mid" (Middle)).

5. Set the Null setting value.

Null computing will be an option operation, could be setup in accordance with user

demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

6. Lead test leads into circuit and start to measure.



Figure 1- 16 AC Current Measurement

7. Use history function.

Press History, the menu shows as below:

Measurement	ACI
Range	20mA
Records	49
Info List HistoG)Update)Save) 🖃

Figure 1- 17 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

To Measure Resistance

The following shows the system connections and selection of measurement functions. The practice provides a guide get familiar with the Resistance measurement technique. Resistance measurement methods include **2-Wire Resistance Measurement and 4-Wire Resistance Measurement**, and will explain separately.

2-Wire Resistance Measurement





Table1- 5 Resistance Measurement Characteristics

Seven Ranges	200Ω, 2kΩ, 20kΩ, 200kΩ, 1MΩ, 10MΩ, 100MΩ
Max Resolution	100uΩ
Open-circuit Voltage	<7V
Input Protection	1000V on all ranges (HI Terminal)
Configurable Parameters	Range, Null value

Steps:

- 1. Connect test leads as shown in Figure 1- 19; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press \bigcirc to select the 2-Wire Resistance Measurement.
- 3. Choose the appropriate measurement range.
- 4. Set the Null value
- 1-14

Null computing will be an option operation, could be setup in accordance with user demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

5. Lead test leads into circuit and start to measure.



Figure 1- 19 2-Wire Resistance Measurement

6. Use history function.

Press History, the menu shows as below:

Measurement	2WR
Range	100MΩ
Records	11
Info List HistoG)Update)Save) 🗖

Figure 1- 20 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

NOTE

When measuring small value resistance, Null operation will be recommended, the test wire impedance error could be eliminated.

4-Wire Resistance Measurement



Figure 1- 21

Table1- 6 Resistance Measurement Characteristics

Seven Ranges	200Ω, 2kΩ, 20kΩ, 200kΩ, 1MΩ, 10MΩ, 100MΩ
Max Resolution	100uΩ
Open-circuit Voltage	<7V
Import Protection	 (1). 200Vрк (2). 1000V on all ranges (HI Terminal) (3). 200V on all ranges (HI Sense, LO Sense)
Configurable Parameters	Range, Null value

Steps:

- 1. Connect test leads as show in Figure 1- 22; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press Ω twice to select the 4-Wire Resistance Measurement.
- 3. Choose the appropriate measurement range.
- 4. Set the Null setting value.

Null computing will be an optional operation, it could be setup in accordance with users' demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

5. Lead test leads into circuit, start to measure.



Figure 1-22 4-Wire Resistance Measurement

6. Use history function.

Press History, the menu shows as below:

Measurement	4WR
Range	100MΩ
Records	55
Info List (HistoG	Update)Save 🛛 🗖

Figure 1-23 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

NOTE

When measuring resistances, avoid contacting both ends of the resistor for accurate measurement.

To Measure Capacitance

The following shows the system connections and selection of measurement functions. The practice provides a guide to get familiar with the Capacitance measurement technique.



Figure 1- 24 Capacitance Measurement Data Interface

Table1- 7 Capacitance Measurement Characteristics

Six Ranges	2nF, 20nF, 200nF, 2uF, 20uF, 200uF
Max Resolution	0.1pF
Input Protection	1000V on all ranges (HI Terminal)
Configurable Parameters	Range, Null value

Basic measurement:

- 1. Connect test leads as shown in Figure 1- 25; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press + to select the Capacitance measurement function.
- 3. Choose the appropriate measurement range.
- 4. Set the Null value.

Null computing will be an optional operation, could be setup in accordance with userdemand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

5. Lead test leads into circuit, start to measure.





Use history function.
 Press History, the menu shows as below:

Measurement	CAP
Range	20uF
Records	0
Info List (HistoG)Update)Save 🛛 🖃

Figure 1-26 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

NOTE

Before measuring the electrolytic capacitance, you should make the two legs of the electrolytic capacitance short circuit and let it be discharged, and then you can measure it.

To Test Continuity

The following shows the system connections and the selection of measurement functions. The practice provides a guide to get familiar with the Continuity measurement technique.





Table1- 8 Continuity Measurement Characteristics

Tests Current	1mA
Max Resolution	Range fixed at $2K\Omega$
Open-circuit Voltage	<7V
Input Protection	1000V (HI Terminal)
Configurable Parameters	$0 \le R_{testing} \le Short-circuit impedance$ ($0\Omega \le Short-circuit impedance \le 2k\Omega$)

Steps:

- 1. Connect test leads as Figure 1- 28 shown. Red test lead connects the HI Terminal, Black test lead connects the LO Terminal.
- 2. Press 3 to select the Continuity Measurement.
- Setup the Short-circuit resistance.
 Press Set button to set up the Short-circuit Impedance.
 The default value is 10Ω. User may carry on the Continuity measurement directly without modification.
- 4. Lead test leads into circuit, start to measure.



Figure 1-28 Continuity Measurement

To Check Diodes

The following shows the system connections and selection of measurement functions. The practice provides a guide to get familiar with the Check Diodes technique.



Figure 1- 29 Check Diodes Interface

|--|

Tests Current	1mA
Max Resolution	Range fixed at 2VDC
Open-circuit Voltage	<7V
Input Protection	1000V (HI Terminal)
Configurable Parameters	$0.1V \le V_{measured} \le 2V$

Steps:

- 1. Connect test leads as shown in Figure 1- 30, red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press to select the Check Diodes.

3. Lead test leads into circuit and start to check.



Figure 1- 30 Check Diodes

To Measure Frequency and Period

The following shows the system connections and selection of measurement functions. The practice provides a guide to get familiar with the Frequency and Period Measurement technique.

Frequency Test



Figure 1- 31 Frequency Measurement Data Interface

Table1- 10 Frequency Test Characteristics

Ranges	200mV, 2V, 20V, 200V, 750V
Measurement Range	3Hz~300kHz
Input Signal Range	100mVAC ~ 750VAC
Input Protection	750VRMS on all ranges (HI Terminal)
Configurable Parameters	Null value

Basic measurement:

- 1. Connect test leads as Figure 1- 32 shown. Red test lead connects the HI Terminal, Black test lead connects the LO Terminal.
- 2. Press (Freq) to select the Frequency Test.
- 3. Set the Null value.

Null computing will be an option operation, could be setup in accordance with user demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)
4. Lead test leads into circuit and start to check.



Figure 1- 32 Frequency Test

Use history function..
Press History, the menu shows as below:

Measurement Range	FREQ 2V
Records	1000
Info List HistoG)Update)Save 🏻 🖃

Figure 1-33 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

Period Test



Figure 1- 34 Period Measurement Data Interface

Table1-1	1 Period	Test Cha	racteristics
----------	----------	----------	--------------

Range	200mV, 2V, 20V, 200V, 750V
Measurement Range	0.33s ~ 3.3us
Input Signal Range	100mVAC~750VAC
Import Protection	750VRMS on all ranges (HI Terminal)
Configurable Parameters	Null value

Steps:

- 1. Connect test leads as Figure 1- 35 shown. Red test lead connects the HI Terminal, Black test lead connects the LO Terminal.
- 2. Press (Freq) twice to select the Period Test.
- 3. Set the Null value.

Null computing will be an optional operation, could be setup in accordance with users' demand. If user does not implement Null computing, this parameter is not required, direct implementation of the next step.

(To know the specific setting methods of the Null value setting, please refer to Chapter 2 "To Set Up Measurement Parameters", Null computing)

4. Lead test leads into circuit, start to check.



Figure 1- 35 Period Test

Use history function.
Press History, the menu shows as below:

Measurement	PERI
Range	2V
Records	550
Info List HistoG)Update)Save 🏻 🖃

Figure 1- 36 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

To Measure Sensor

The DM3000 converts the sensor physical properties into electrical voltage, resistance, current for measurement. So it needs the sensor name, sensor type, sensor physical unit, sensor reference data, and arithmetic.



Figure 1- 37

Table1- 12 Sensor Building Options

New	Newly built sensor reference data file		
Edit	Edit a sensor reference data file		
Load Load a sensor reference data file			
Display Set display mode			

Steps:

- 1. Connect test leads as shown in Figure 1- 54, Figure 1- 55, red test leads to the HI Terminal, black test leads to the LO Terminal.
- 2. Press (sensor) to select the Sensor function.
- 3. Press New, the display shows:



Figure 1-38

(1). In New function interface, press Prpty to edit the sensor Name, sensor Type and physical characteristics of the sensor.

© 2007 RIGOL Technologies, Inc.



Figure 1-39

Press Name button, create a name for the sensor reference name.

Name: B ei	nsor			
			-	
ABCDI	EFGHIJK	<u>(LMNOPQ</u>		<u>WXYZ</u>
A/a/1		Del	Done	Ť.



Press Done button to finish the input work.

Press Type button, to select the sensor type, include: DC voltage, DC current, 2-wire, 4-wire resistance and frequency.



Figure 1-41

Press 📑 button back to the higher level menu.

Press Unit button, to select the physical unit, include: °C, Pa, %, °, and F.



Figure 1-42

Press 🖬 button back to the higher level menu.

In New interface, press Define button to build the reference table.

Ad	d)	γ^{-}	Υ	Тор	Ĩ	End	Υ	t

Figure 1-43

RIGOL

Press Add button, to input the Measured and Corresponding value to the reference value data.



Figure 1-44



Figure 1-45



Figure 1-46

Press SEG button, you are allowed to segment the reference value with different arithmetic.

Press Arith button select the algorithms to Linear or Curvilinear.

Arith				
		Lin	e	
Line	Curve	<u> </u>	<u> </u>	t

Figure 1-47

1		0.0000n	nV	0.0000	0°		Line
2		1.0000n	nV	10.000	0°		
3		2.0000n	nV	30.000	0°	2	Curve
Ad	d	Del	Edit	Тор	End	Υ	_ _

Figure 1-48

Press **T** return to New interface then press **Done** button, you have finished the input work, then you can use this sensor reference immediately, or you can save it into the built-in storage space or your U-disk for future work.



Figure 1-49

Press Apply button, to use this reference value file. Press Save to save the file.

►C:\	Sensor	File1: PT100ITS4W
		File2:
		File3:
Disk	∫ Type Rea	id Erase 🚅

Figure 1- 50

Press Save button, to finish the save operation.



Figure 1-51

Press Apply button, to start the sensor measurement.

SENSOR	Sensor	672	Rmt
÷ .	1 81	5.00) °
New) Ec	lit Load	(History) [Disp Hide

Figure 1- 52

- (2). Press Edit button, to edit the saved sensor reference values.
- (3). Press Load button, to load the saved sensor reference file.
- (4). Press Disp button, to choose the value to be shown on the display interface.
- (5). Press History, enter the menu shown below:

RIGOL

Sensor	Sensor
Туре	DCV
Records	130
Info List	Update Save 🕹 🚅

Figure 1- 53 The History Data

Use the history function to review or save the data that has acquired by the current measurement function. The data can be display "Info" (information), "List" and "HistoG" formats.

Press Update softkey to update the History data.

Press Save softkey to save data.

4. Lead test leads into circuit, start to check.



Figure 1- 54 Voltage, Resistance, and Frequency Mode Sensor





© 2007 RIGOL Technologies, Inc.

Display Mode				
Cor	res	spo	ond	
Meas Corrsp	All	•		t.

Figure 1- 56 Choosing interfaces of Measure and Correspond Value

To Choose Reading Resolution

The measurement reading resolutions (the accuracy) are 4 1/2, 5 1/2, 6 1/2 digits.



Figure 1-57 The Digits Resolution Control Keys

Methods:

Use the left and/or right direction key to adjust the desired measurement resolution. Press left button to decrease accuracy, press right button to increase accuracy.

The digits resolving index Selection

(1). Each precision of the measure function can be set separately without influence.

(2). Choose the reading precision of 6 1/2 bit when measuring AC for best results.

(3). Save the digits resolving index in volatile memory.

To Choose Data Digit Display

^{Digits} Function to set up data display format; 5, 6 or 7 digits (Default: 5 digits).



Figure 1-58 7 Digits Data



Figure 1- 59 6 Digits Data



Figure 1- 60 5 Digits Data

NOTE

In high-accuracy measurement, if users need to show less data digit, it can show fewer digits for user-friendly reading.

To Choose Range Options

Use "manual" selection or "automatic" to choose measurement range. The "automatic" allows the instrument to determine the most appropriate range while for better performance choose the "manual" method.



Figure 1- 61 Choice Range Options Keys

Methods 1:

Use up and down direction keys to adjust the Range. Press Up to increase the range, press Down to reduce the range.

Press (Auto) key, to select the automatic method.

Methods 2:

Use the menu option keys to adjust the range as shown in the following Figure 1-62.

DCV		Auto	572		Rmt
	$\cap \cap$	$\cap \cap$	152	7 n	•V
	$\underline{\sim}$	$\underline{\mathcal{N}}$	<u>,</u>		
Auto	ľ Rng	+ľRng∘	– [History]	Null	ĭ Hide Ì

Figure 1- 62 Choice Range Options Menu

Option Menu	Explain
Auto	Start automatically adjustment range, and banned manually adjustment range.
Range+	Start manually increased range, and banned automatically adjustment range.
Range-	Start manually reduced range, and banned automatically adjustment range.

Operation description:

- When the input signal is beyond the current scope of the measurement range, the multimeter will show "OVER RANGE".
- After restarting and remote- replacement, range options will turn back default option "Automatic choice range".
- When testing the Continuity and Checking the diodes, the range option are fixed. The range of Continuity is $2K\Omega$ while the diodes are $2V_{DC}$.

NOTE

Other functions of the direction keys:

At measurement parameters setting menu, press the up and down keys to choose setting areas.

At data input interface, press up and down keys to change the number. Press left and right keys to change the different digits.

To Control Trigger Options

Use $\frac{\mathbb{Run}}{\mathbb{H} \circ \mathbb{I}}$ or $\frac{\mathbb{Sun}}{\mathbb{R}}$ to trigger the multimeter. When the multimeter is powered up, the $\frac{\mathbb{Run}}{\mathbb{H} \circ \mathbb{I}}$ key will be on, indicating means this function is running.



Figure 1-63 Trigger Control Keys

Multimeter triggering options include Automatically, Single and Hold.

Auto Triggering

Press $\frac{Run}{Hold}$ key once, it takes continuous readings at the fast rate the specified measurement configuration.

Single Triggering

Press ^{Single} key the multimeter takes one reading, or a number of readings specified by a sample count entered.

Holding Triggering

Press $\frac{Run}{Hold}$ key, it allows capturing and holding a stable reading on the front panel display.

NOTE

Press (Single) button, during Remote Mode, to switch back to the local mode.

Chapter 2 Operating Your Multimeter

By now the front/rear panel, the function control area and keys, and the ways to set up the multimeter have been introduced.

This chapter goes through all groups of front-panel buttons and menus, and extends the knowledge the operation instructions.

Follow the exercises to get the most of the powerful measurement capabilities of the multimeter.

This chapter covers the following topics:

To Set up Measurement Parameters	(Meas)
To Make Mathematics Operation	(Math)
To Set up Trigger System	(Trig)
To Save and Recall	(Save)
To Set up Utility	(Utility)
To Set up High-speed data acquisition	(Data Log)
and Multi-route Scanning	
Use the built-in help system	(Help)

To Set up Measurement Parameters

Press (Meas) key to enter the Measurement Menu for setting to set up the measurement parameters. Users may use the factory defaults or establish desired configurations.

The Measurement parameters Menu includes: Conti, Filter, Res, Null, and Ratio. To change these parameters, satisfy the dissimilar condition of the measurement request.

Table 2- 1 Meas Menu Description

Function Menu	Description
Conti	Set up the resistance value in continuity test.
Filter	Choose the AC filter bandwidth.
Res	Choose the DC voltage input impedance.
Null	Set up null value.
Ratio	Measured the ratio of two DC voltage signal.
Freq	Measured the frequency of AC signal.
Ł	Save all changes, and end the current operation.

Continue Resistance

Set up the continue resistance value in the short test menu. When the measured resistance is below limit, the DM3000 will beep to indicate the circuit continuation. The continue resistance is only using at Continue Test.

Press $\stackrel{\text{Meas}}{\longrightarrow}$ \rightarrow Conti, enter the menu shown below:



Figure 2-1

Use direction keys to change the parameter values:

Press left and right directional keys to choose different digits. Press up and down keys to change the current digit value.

Continue Resistance

The range of continue resistance is $1\Omega \sim 2000\Omega$. The default value is 10Ω . The continue resistance value stored in the nonvolatile memory, the resistance still keep when the power is off.

AC Filter

There are three settings at the AC Filter menu. Choose the appropriate setting for more accurate measurements. This function applies AC Voltage and AC Current measurement only.

Press $\stackrel{\text{(Meas)}}{\longrightarrow}$ Filter, enter the menu shown below:



Figure 2-2

Table 2- 2 AC Filter Menu Description

Function Menu	Description
Slow	Set up the filter with low speed.
Mid	Set up the filter with to middle speed.
Fast	Set up the filter with high speed.
÷	Save all changes, back to a higher level menu.

Table 2-3 AC Filter Parameters Characteristics

AC Filter Options	Input Frequency	Setting Timer	
Slow	3Hz \sim 300kHz	1.2 reading/s	
Mid	20Hz \sim 300kHz	0.5 reading/s	
Fast	200Hz \sim 300kHz	0.3 reading/s	

AC Filter

The AC Filter Parameters are saved in the volatile memory, the data will lose when the power is off.

The default value of AC Filter Parameters is "Mid" (middle).

DC Input Impedance

The options of input resistance for DC value measurements are $10M\Omega$ and $>10G\Omega$. For 200mV, 2V, 20V measuring ranges, choose $>10M\Omega$ for better result.

Press $\stackrel{\text{Meas}}{\rightarrow}$ Res, enter the menu shown below:

Input Z
10MΩ
10ΜΩ >10GΩ Τ Τ Δ

Figure 2-3

Table 2- 4 DC Input Resistance Menu Description

Function Menu	Description
10ΜΩ	Set up the DC Input Impedance to $10M\Omega$.
>10GΩ	Set up the DC Input Impedance to $>10G\Omega$.
Ł	Save all changes, back to a higher level menu.

DC input resistance selection:

- (1). While the DC input resistance is selected to $10M\Omega$, the input resistance of all measurement range is $10M\Omega$;
- (2). While the DC input resistance is selected to >10G Ω , the input resistance for 200mV, 2V and 20V measurement range is >10G Ω ; for 200V and 1000V measurement range is kept at 10M Ω .

Null Measurement

The DM3000 null settings is available for DC voltage, AC voltage, DC current, AC current, resistance, frequency/period, and capacitance measurements.

With null setting each measurement is the difference between a stored null value and input signal. The null measurement enhance the accuracy by off set test lead impedance. It is particularly important prior for making capacitance measurements. The formula used for calculating null measurements is:

Result = reading - null value

The null value is adjustable, and can be set to any value between 0 and $\pm 120\%$ of the highest range, for the present function.

Press $\stackrel{\text{Meas}}{\rightarrow}$ Null, the display shows:



Figure 2-4

Table 2- 5 Null Measurement Menu Description

Function Menu	Description
Current	Use the measured value as the null value.
Clear	Set the value to be zero.
On/Off	Turn the Null function on or off.
Ł	Save all changes, back to a higher level menu.

Null measurement parameters setting methods:

- (1). In operation interface press Null button, use the current value to be Null value.
- (2). In Null setting display interface, uses the Direction Keys to input null value.
- (3). The setting value of the NULL value: $0 \sim \pm 120\% \times Maximum$ Range (for current: $0 \sim +120\% \times Maximum$ Range)

Ratio Measurement

Use Ratio measurement to measure the ratio of 2 DC voltage signal. Ratio measurement is only for measuring DC voltage.

Press $\stackrel{\text{(Meas)}}{\rightarrow}$ Ratio, the display shows:



Figure 2-5

Table 2- 6 Ratio Measurement Menu Description

Function Menu	Description
ON	Enable the Ratio Measurement Function.
OFF	Disable the Ratio Measurement Function.
£	Save all changes, back to a higher level menu.

The method of the radio measurement:

Ratio= _____ DC Voltage

DC Reference Voltage

- (1). Measuring Sense Terminal, for measuring reference DC voltage. Default automatic range option under 10V.
- (2). Measuring Input Terminal, for measuring DC voltage. The measuring voltage scope is under 10V.
- (3). Input LO Terminal and Sense LO Terminal must have a common reference value, and the voltage difference cannot surpass $\pm 1V$.

Basic measurement:

- 1. Connect test leads shown in Figure 2- 6; red test leads to the HI Terminal, black test leads to the LO Terminal.
- 2. Press mv to select the DC Voltage measurement function.
- 3. Choose the appropriate measurement range.
- 4. Set up the DC Ratio Measurement.

Press $\stackrel{\text{Meas}}{\rightarrow}$ \rightarrow Ratio \rightarrow On, to start the DC Ratio Measurement.

5. Lead test leads into circuit, start to measure.



Figure 2- 6 Ratio Measurement

Frequency Measurement

Frequency measurement function is used for measuring the frequency of AC signal (voltage and current) only.

Press $\stackrel{\text{Meas}}{\rightarrow}$ Freq, the display shows:



Figure 2-7

Table 2-7 Ratio Measurement Menu Description

Function Menu	Description				
ON	Activate the Frequency Measurement Function				
OFF	Deactivate the Frequency Measurement Function				
£	Save all changes, back to a higher level menu.				

Basic measurement:

- 1. Connect test leads as shown in Figure 2-9; red test lead to the HI Terminal, black test lead to the LO Terminal.
- 2. Press $\overline{\sim v}$ or $\overline{\sim I}$ to select the AC voltage or current measurement function.
- 3. Choose the appropriate range.
- 4. Set up the AC Frequency Measurement.

Press $\stackrel{\text{Meas}}{\longrightarrow}$ \rightarrow Freq \rightarrow On, to start the AC Frequency Measurement.

Press \rightarrow to save all changes, back to a higher level menu.



5. Lead test leads into circuit, start to measure.

Figure 2-10 Frequency Measurement Display Interface

50.00Hz 06/01/2007 15:31:54

Freq

Math Functions

Press (Math) key, the display shows:





The DM3000 provides five math functions: Null, statistic, dB, dBm and Limit testing. Only one of these math functions can be enabled at a time, and remains in effect until change.

In Math function interface, choose the required math function. Press On to start the Math function.

Math functions are the combination of mathematical and the basic measurement operation. However, not all combinations are supported. In such case the math function will automatically turn off.

Function Menu	Settings	Description			
Statistic		Reading statistic functions, including: Max, Min,			
Statistic		Average, and number of measurement.			
dB		The dB measurement is the difference between			
UD		the input signal and a stored relative value.			
		The dBm function is logarithmic, and is based on			
dBm		a calculation of power delivered to reference			
	/	impedance.			
Limit		The limit test function performs pass/fail testing			
LIIIIC		with upper and lower limits that you specify.			
	ON	Turn on Math function.			
UN/UFF	OFF	Turn off Math function.			
ل		Save all changes, back to a higher level menu.			

Table 2-8 Math Function Menu Description

Table 2-9 shows the supported combination.

Measurement		Supported the	ı	
Function	Statistic	dB	dBm	Limit
DC Voltage	Support	Support	Support	Support
AC Voltage	Support	Support	Support	Support
DC Current	Support			Support
AC Current	Support			Support
2-Wire Resistance	Support			Support
4-Wire Resistance	Support			Support
Frequency	Support			Support
Period	Support			Support
Continuity				
Diodes				
Ratio	Support			Support
Capacitance	Support			Support

Table 2-9 Math Function is used for the following measurement applications

Math Functions Selective

The DM3000 provides five math functions: Null measurements, Total measurements, dB measurements, dBm measurements, and Limit testing. Only one of these math functions can be enabled at the same time, and remains in effect until you turn it off or change it.

Press (Math) key, the display shows:



Figure 2-12

Table 2- 10 Math Functions Menu Function Description

Function Menu	Settings	Description		
Statistic		Reading statistic functions, including: Max, Min,		
Statistic		Average, and number of measurement.		
dB		The dB measurement is the difference between		
UD		the input signal and a stored relative value.		
15		The dBm function is logarithmic, and is based on		
dBm		a calculation of power delivered to reference impedance.		
Limit		The limit test function performs pass/fail testing		
LIIIIL		with upper and lower limits that you specify.		
	ON	Turn on Math function.		
	OFF	Turn off Math function.		
£		Save all changes, back to a higher level menu.		

1. Statistic Measurement

The Statistic function is for DC voltage, AC voltage, DC current, AC current, resistance, frequency/period, and capacitance measurement.

The front panel can display the statistical data for any set of readings: average (Ave), maximum (Max), minimum (Min), and which can read with All function and the number of samples taken (Total).

DCV	Auto	672	Stats Rmt
		Current	000.077,2mV
Max	000.077,2mV	Min	000.076,7mV
Ave	000.076,9mV	Total	10



Press $\xrightarrow{(Math)}$ \rightarrow Stats, the display shows:



Figure 2-14

Table 2-11 Statistic Measurement Menu Function Description

Function Menu	Description		
Max (Maximum)	Maximum value from a set of measurements.		
Min (Minimum)	Statistical measurement all reading Min value.		
Ave (Average)	Statistical measurement all reading Average value.		
All	The complete a set of measurement.		
ل	Save all changes, back to a higher level menu.		

2. Limit Measurement

Use the Limit test function to perform pass/fail testing with respect to specified upper and lower limits. The limits can be set to any value between 0 and $\pm 120\%$ of the highest range of the current function. The upper limit must be positive than the lower limit.

Press $\stackrel{\text{(Math)}}{\rightarrow}$ Limit, the display shows:



Figure 2-15

Table 2-12 Limit Measurement Menu Function Description

Function Menu	Settings	Description		
High		Set the desired Upper limit.		
Low		Set the desired Lower limit.		
÷		Save all changes, back to a higher level menu.		

The range of Limit function:

- (1). The limit value scope is $0\% \sim \pm 120\%$ of the current measurement range.
- (2). The upper limit value should be always bigger than the lower limit value.

3. dB Measurement

The dB function applies to AC voltage and DC voltage measurements only. Each dB measurement is different between the input signal and a stored relative value, with both values converted to dBm.

Press $\stackrel{\text{Math}}{\longrightarrow}$ \rightarrow dB, enter the menu shown below:



Figure 2-16

Table 2-13 dB Measurement Function Menu Function Description

Function Menu	Description			
Default	Use the default value.			
د	Save all changes, back to a higher level menu.			

dB =10xLog₁₀ [(Reading² / R_{REF}) / 0.001W] – (dB setting value)

 R_{REF} expressed measuring the resistance value in the actual electric circuit. Range of the dB setting value: -120 dBm ~ +120 dBm. The default is 0 dBm. You can either let the instrument automatically measure this value, or you can enter a specified value.

4. dBm Measurement

This function applies to AC voltage and DC voltage measurements only.

The dBm function is logarithmic, and is based on a calculation of power delivered to a reference resistance, relative to 1 milliwatt.

Press $(Math) \rightarrow dBm$, the display shows:



Figure 2-17

Table 2- 14 dB Measurement Function Menu Function Description

Function Menu	Description			
Default	Use the default value.			
4	Save all changes, back to a higher level menu.			

The computation method of the dBm:

 $dBm = 10 \times Log_{10} [(Reading^2 / R_{REF}) / 0.001W]$

 R_{REF} expressed measuring the resistance value in the actual electric circuit.

To Set Up Triggering Parameter Function

The DM3000 triggering system allows generation of triggers either manually or automatically, and taking multiple readings per trigger. The DM3000 also allows setting of an internal triggering level, and to set up pre-triggering.

Selecting a Trigger Source

Specify the source of a trigger. The power–on default is auto triggering. Other types of triggering are described in the following sections.

The power–on trigger default mode was auto trigger (RUN) mode. Press $\frac{Run}{Hold}$ to go
to the hold trigger mode. Press $\frac{Single}{Single}$ to go to the single trigger mode, a single
reading is taken, and another reading is taken each time, the $\frac{(Single)}{(Single)}$ button you
pressed, or when a hardware trigger is received on the Ext Trig connector.

Trig Mode				
Hold	D	isa	ble	
Auto Single	Ext	VMC Y	Y	t

Figure 2-18

Table 2-	15	Trigger	Parameters	Setting	Menu	Function	Description
----------	----	---------	------------	---------	------	----------	-------------

Function Menu	Description		
Auto	Setting system Auto trigger and reading Hold meter reading measurement schemes		
Single	Setting Single manual trigger parameter.		
Ext	Setting external triggering.		
VMC	/MC Setting the output signal pulse width at sampling ending output signal.		
£	Save all changes, back to a higher level menu.		

Auto Triggering

Auto triggering takes continuous measurement at the highest sample rate for the specified measurement configuration (function, range, resolution, and so forth). Auto trigger is the default trigger mode at system power up.

Press $(Trig) \rightarrow$ Auto, the display shows:



Figure 2-19

Table 2- 16 Auto Trigger Function Menu Description

Function Menu	Setting	Description
Interval		Set interval time in 400~2000ms.*
Hold	ON/OFF	Set turn the Reading Hold function ON or OFF.
£		Save all changes, back to a higher level menu.

Interval time:

The delay between the trigger signal and the first sample taken. This is useful in applications when the input signal settles before taking a reading, or for pacing a burst of readings.

- The trigger delay may be set from 400 to 2000 ms.*
- The continuity and diode test functions ignore the trigger delay.
- The default trigger delay automatically set if no specified value entered.
- If a trigger delay entered, it will is used for all measurement functions (except continuity and diode test).

*NOTE:

The trigger interval time is $400 \sim 2000$ ms (6 1/2), $200 \sim 2000$ ms (5 1/2) and $100 \sim 2000$ ms (4 1/2). The range of the interval time will be different in different resolving index.

© 2007 RIGOL Technologies, Inc.

Reading Hold

The reading hold mode captures and holds a reading on the front panel display when a stable reading is detected. The system Hold ranges are 0.01%, 0.1%, 1%, and 10%.





Figure 2-20

Table 2- 17 Reading Hold Function Menu Description

Function Menu	Description
On/Off	Turn on/off the reading hold function.
0.01%	Set the hold scope is 0.01%.
0.1%	Set the hold scope is 0.1% .
1%	Set the hold scope is 1%.
10%	Set the hold scope is 10%.
t	Save all changes, back to a higher level menu.

RIGOL

Reading Hold Function

Start the Reading Hold Function, the hold measurement use the following rules judge the reading count:

When Max() - Min() \leq hold range x ReadingN, the multimeter hold ReadingN on the display.

The display update a new reading basing on the current value and the three preceding measurements before the reading was hold:

Max (ReadingN, ReadingN-1, ReadingN-2, ReadingN-3)

Min (ReadingN, ReadingN-1, ReadingN-2, ReadingN-3)

NOTE

When Reading Hold started, the input resistance was set to $10M\Omega$ for all DC voltage range to reduce noise arising from the open-loop testing.
Single Triggering

The multimeter takes one reading, or a number of readings specified by a sample count you enter, each time (Trig) press.

Press $(Trig) \rightarrow$ Single, the display shows:



Figure 2-21

Table 2- 18 Single Trigger Function Menu Description

Function Menu	Description				
Single	Set a sample count, the default sample count is 1.				
4	Save all changes, back to a higher level menu.				

Sample Count

While the multimeter receives a single trigger signal, the multimeter takes one reading or a number of readings.

The number of sample count range from 1 to 50,000. The factory default is 1.

External Triggering

Trig is used to set the parameter which initiates the triggering function. It requires to set the following parameter: the Rise edge, the Fall edge, HiLev (high level) and LoLev (low level). Press Done to start the external triggering, the keys $\frac{\text{Run}}{\text{Hold}}$ and $\frac{\text{Single}}{\text{Single}}$ on the front panel will be off to indicate the instrument using external triggering mode.

Press $\stackrel{\text{(Trig)}}{\rightarrow}$ Ext, the display shows:



Figure 2- 22 The Interface of the External Triggering

Triggering modes: the rise edge, the fall edge, high level and low level.

Using the triggering function

Auto, hold and Single trigger can switch by using $\frac{Run}{Hold}$ and $\frac{Single}{Pold}$, press Done button on the triggering interface to startup the external triggering.



Figure 2-23 The Interface of the External Triggering

When external triggering start, the key $\frac{\mathbb{R}un}{Hold}$ and $\frac{\mathbb{S}ingle}{\mathbb{R}}$ on the front panel both will be off.

To Set up the VMC

At external triggering mode, when the data sampling is over, the instrument outputs a pulse signal at VM Comp located on the rear panel. The output pulse width can be adjusted.

Press $(Trig) \rightarrow$ VMC, the display shows:



Figure 2-24

Table 2- 19 The Explanation of the External Triggering(polarity: positive)

Function Menu	Setting	Explanation			
Polar	Pos Neg	Setting the pulse signal's polarity.			
PWidth		Setting the pulse width.			
÷		Store the changing and back to the higher menu.			

The VMC function output

- (1).At external triggering mode, when the data sampling is over, the instrument will output a pulse signal to indicate operation completed.
- (2).At external triggering mode, when operating math limited value, the instrument will export a pulse signal to indicate out of limits detected.

Store and Recall

To Storage and Recall function enable save, load, and delete the measurement data, parameters and sensor files in the local storage as well as in a USB storage.

Press (save) key, the display shows:

► C:\	▶SysSet	tting	ile1: Fi	le	
A:\	MeasD)ata F	ile2:		
	MEAS_	CSV	ile3:		
Disk	Туре	Read	Save	Erase	_

Figure 2-25

Table 2- 20 Storage and Recall Function Menu Description

Function Menu	Setting	Description		
Disk	C:\ (Local)	Choose Local or U-Disk storage.		
	A:\ (U-Disk)			
	Sys Setting/			
Туре	Meas Data/	Choose the type of the files shown		
туре	MEAS_CSV	choose the type of the files shown.		
Read		Load the selected file.		
Save		Save the file to the specified location.		
Erase		Delete the selected file.		
Ł		Save all changes, back to a higher level menu.		

Local/U-Disk Storage

Local storage block is built-in the multimeter. The U-Disk storage will be a USB flash disk.

Press (save) key, enter the menu shown below:

C:\	SysSetting			
 A:X 	MeasData			
	MEAS_CSV			
Disk	Type Read	I) Save	(Erase)	

Figure 2- 26 The U-Disk Storage Interface

Table 2 21 Storage and Recall Fanetion Field Description	Table	2-	21	Storage	and	Recall	Function	Menu	Description
--	-------	----	----	---------	-----	--------	----------	------	-------------

Function Menu	Setting	Description		
Explore		Choose Local storage or U-Disk.		
	Sys Setting/			
	Meas Data/			
	MEAS_CSV/			
Туре	LOG_CSV			
	Data log/	Choose the type of the files shown.		
	Sensor/			
	Sensor Data/			
	Scan Task			
Read		Load the selected file.		
Save		Save the file the specified location.		
Erase		Delete the selected file.		
د		Save all changes, back to a higher level menu.		

Document Storage

In local/U-disk storage area, you allowed to save, load and delete parameter, data and sensor documents.

Choose the storage area of the files

Press $(save) \rightarrow Disk$, choose Local storage or U-Disk rout. Choose C:\, and the default fype is "SysSetting".

▶ C:\ A:\ MeasData MEAS_CSV Disk Type Read Save Erase _

Figure 2- 27 The Local storage interface

Choose the storage type of the files

Press $(save) \rightarrow Type$, choose the type "MeasData" of the files, into the menu shown below:

► C:\	SysSetting	File1:
A:\	▶MeasData	File2:
	MEAS_CSV	File3:
Disk	∫ Type ∫ Rea	d Save Erase 🖃

Figure 2-28

Press $(save) \rightarrow$ Type, choose the type "MEAS_CVS" of the files, into the menu shown below:

►C:\	SysSetting		
A:\	MeasData		
	▶MEAS_CSV		
Disk	(Туре)	 \square	L)

Figure 2-29

Press $(save) \rightarrow Type$, choose the type "LOG_CVS", "Datalog", "Sensor", "SensorData", "ScanTask" of the files, into the menu shown below:

© 2007 RIGOL Technologies, Inc.



Figure 2- 30

NOTE

Store, recall and delete use the same interface.

- 1) To choose different **storage locations**, Press Disk, to switch the store location (C:\(Local) and A:\(U-Disk)).
- 2) To choose different **files types**, Press Type, to switch the file type (Data, Parameter, and Sensor).
- 3) When the A disk in use, do not remove the U disk.

Document Operation

Use the up and down buttons to select the file, then press Read, Save and Erase soft keys to do the corresponding operation.

►C:\	▶SysSetting	File1: File
A:\	MeasData	File2:
	MEAS_CSV	File3:
Disk	Type Rea	d Save Erase 🖃

Figure 2	2- 31
----------	-------

To save the file, name the file with letters and/or numbers.

FileName	a				
abcd	efghij	klmn	opq	rstuv	NXYZ
A/a/1		(Del	Done	T

Figure 2-32

Input Method:

- 1) Press A/a/1 button to select the Capital letter, Lowercase letter or Numbers.
- 2) Use the up/down button to close or open the number/letter selection area display.
- 3) Use the left/right button to move cursor in FileName or number/letter selection area.
- 4) The Delete function can only delete the letter on which the cursor taking place.

To Set Up the Utility

The Utility function establishes system parameters, interface parameters, and calibration.



Figure 2-33

Table 2- 22 Utility Function Menu Description

Function Menu	Description			
*FPGA	Update FPGA Programm			
I/O	To set up I/O and LAN parameters.			
Sys	To set up system information configuration.			
T/C	Test and calibration function.			

*Note: FPGA button shows only when U-disk connencted.

Set Up the I/O System

Press $\underbrace{\text{Utility}} \rightarrow I/O$, the display shows:



Figure 2-34

Table 2-23 I/O Setting Function Menu Description

Function Menu	Description		
LAN	Set up LAN interface.		
GPIB	Set up GPIB I/O interface.		
USB	Check USB interface ID.		
RS232	Set up RS-232 I/O interface.		
£	Save all changes, back to a higher level menu.		

Operation introduction:

Remote control through LAN, GPIB (IEEE-488), USB and RS-232 interface can be configured. The I/O interface of GPIB, USB and RS-232 only one could be used at the same time.

Set Up LAN I/O Parameter

LAN Parameters

Following the procedures to set up a LAN configuration and remote interface from the front panel.

- IP Address
- Subnet Mask
- Default Gateway
- DNS Server
- Host Name

Press $(Utility) \rightarrow I/O \rightarrow LAN$, the display shows:

IP A	ddress	:	168.254.	5.23	38 [
Subl	Mask	:	255.255.2	255.	0
Defa	ault Gate	eway:	168.254.	5.	1 [
IP Ĭ	DNS	Info	r T		

Figure 2-35

Tahla 2_	24 I AN	Darameter	Function	Μοηιι	Description
Iable 2-		raiametei	I UNCLION	Menu	Description

Function Menu	Setting	Description	
IP		Set IP address and others information.	
	Host Name/	Set the host name.	
DNS	Domain Name/	Set the domain name.	
DNS address		Set DNS address.	
Info		Display current LAN information.	
_t		Save all changes, back to a higher level	
		menu.	

IP Settings

Press $(Utility) \rightarrow I/O \rightarrow LAN \rightarrow IP$, the display shows:



Figure 2-36 DHCP On



Figure 2-37 DHCP Off

Table 2- 25 IP Setting Menu Description

Function Menu	Setting	Description		
	ON/	Automatically assigns the IP address		
DHCP	OFF	Manual assigns the IP address		
Done		Save all changes, back to a higher level		
Done		menu.		

IP address:

Suggest you ask you network administrator for a unique IP address .**IP** address can be saved in non-violet memory.

Subnet mask:

Suggest you ask you network administrator for available subnet mask. **Subnet mask** can be saved in non-violet memory.

Gateway:

Suggest you ask you network administrator for a available gateway. **Gateway** can be saved in non-violet memory.

DNS Settings

Press $(\text{Utility}) \rightarrow I/O \rightarrow LAN \rightarrow DNS$, the display shows:

DNS Server	
	DM300 <mark>0</mark>
Host DN	

Figure 2-38

Table 2- 26 DNS Setting Menu Description

Function Menu	Setting	Description		
Host		Set the host name.		
DN		Set the domain name.		
DNS		Set the DNS address.		
Dono		Save all changes, back to a higher		
Done		level menu.		

Host name:

Configure the strings of the host name, including letters and numbers. Suggest you ask you network administrator for host name .Host name can be fixed by moving the direction button to choose the letters. Host name can be saved in non-violet memory.

Domain Name:

Configure the strings of the domain name, including letters and numbers. Suggest you ask you network administrator for domain name. Domain name can be fixed by moving the direction button to choose the letters. Domain name can be saved in non-violet memory.

DNS server:

Suggest you ask you network administrator for available DNS server. It could be saved in non-violet memory.

Set Up GPIB I/O Parameter

Each device on the GPIB (IEEE–488) interface must have a unique address. You can set the address of multimeter to any integral value between 0 and 30. The default address is "7" when the instrument is shipped from the factory.

Press $(Utility) \rightarrow I/O \rightarrow GPIB$, enter the menu shown below:



Figure 2- 39

Table 2- 27 GPIB I/O Setting Function Menu Explanation

Function Menu	Explanation			
ſ	Save all changes, back to a higher level menu.			

Set Up RS-232 I/O Parameters

Choose RS-232 (serial data interface) interface. Proper configure the baud rate and parity to make parameters the same as that settled in your computer. Make sure the connection line is unbroken. The configuration is saved in inviolate memory and shown in according menu.

Press $(\text{Utility}) \rightarrow I/O \rightarrow RS232$, enter the menu shown below:



Figure 2-40

Table 2- 28 RS-232 Parameter Function Menu Explanation

Function Menu	Display	Explanation	
	1200		
		Set RS-232 baud rate as 1200,	
Baud		2400, 4800, 9600, 19200, 38400,	
		57600 or 115200.	
	115200		
Parity	None Odd Even	The parity check include: None, Ode check, and Even check.	
£		Save all changes, back to a higher level menu.	

Baud rate:

Proper configure the baud rate and parity to make parameters the same as that settled in your computer.

Available baud rate values are 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The default is 9600.

Parity:

Proper configure the parity to make it same as that settled in your computer. The default is "None".

Note: When RS-232 interface is used, the parity of multimeter should be:

None parity: PC software should set 8 bits;

Odd/Even parity: PC software should set 7 bits

System settings

Press $(Utility) \rightarrow$ System, enter the menu shown below:

System Setting
ENGLISH
Lang Disp Sound Clock Format Cfg

Figure 2- 41 The Interface of Setting the System Function

		_			
Tahla 7-	20 Svetam	Sottings	Function	Monu	Evolution
	29 System	Jettings	T UNCLION	nenu	

Function Menu	Explanation
Lang	Select the display interface languages.
Disp	Set up the display.
Sound	Switch beeper sound On/Off.
Clock	Set up the benchmark clock.
Format	Set up digit display format.
Cfg	Set up or reset the system values.

Select languages

DM3000 supports two kinds of languages for users.

Press $(Utility) \rightarrow Sys \rightarrow Lang$, enter the menu shown below:



Figure 2-42

Table 2- 30 System Settings Function Menu Explanation

Function Menu	Explanation
中文简	Select the Chinese Simplified.
English	Select the English.
ł	Save all changes, back to a higher level menu.

Set Up the Display

Press $(Utility) \rightarrow Sys \rightarrow Disp$, enter the menu shown below:



Figure 2-43

Table 2- 31 Display Settings Function Menu Explanation

Function Menu	Explanation
Bright	Increase or decrease the display light with left and right keys.
Contr	Increase or decrease the display contrast with left and right keys.
Invert	Set to invert display mode.
£	Save all changes, back to a higher level menu.

Beeper On/Off

Press $(Utility) \rightarrow Sys \rightarrow Sound$, enter the menu shown below:



Figure 2- 44 Sound On



Figure 2- 45 Sound Off

Set Up System date/time

Press $(Utility) \rightarrow Sys \rightarrow Clock$, enter the menu shown below:



Figure 2-46 Data Set Interface



Figure 2-47 Time Set Interface

Table 2- 32 Clock Settings Function Menu Explanation

Function Menu	Explanation
Date	Set up the date.
Time	Set up the time.
Hide	Hide data and time display.
Done	Save all changes, back to a higher level menu.
£	Back to a higher level menu, without save.

Set Up Digit Format

Press $(Utility) \rightarrow Sys \rightarrow$ Format, and enter the menu shown below:



Figure 2-48

Table 2-33 Digit Format Function Menu Explanatio
--

Function Menu	Explanation
Radix Point	Expresses radix point with \bullet or \car{a} .
Separator	Expresses separator with $ {}^{m s}$, space or none.
±	Save all changes, back to a higher level menu.

Figure 2- 49 "• " radix point, " ? " separator



Figure 2- 50 "•" radix point, none separator



Figure 2- 51 "•" radix point, "space" separator



Figure 2- 52" 7 " radix point, "space" separator



Figure 2- 53 " 7 " radix point, none separator

DCV		Auto	672		÷
•	\cap	ററ റ	ገፈፈ	3n	nV
Auto	í Rno	1+) Rna	- îHistorv	Null	ĭ∎¥ ĭHide

Figure 2- 54 " ? " radix point, " • " separator

Notice:

The decimal and the separator cannot be the same mode, if the decimal is $\,^{\,\circ}$, then the separator can only be none of space; in contrarily, if the decimal is $\,^{\,\circ}$, then the separator can only be $\,^{\,\circ}$, none of space.

Factory Defaults Setting

Press^(Utility) \rightarrow System \rightarrow Cfg \rightarrow Default, then restart the system to factory default state. The Parameter shown below:

Table 2- 34 Parameter Lists of Factory Defaults:

Measurement	Factory Defaults Setting
* Continue Resistance	10Ω
Filter	Fast
DC Resistance	10ΜΩ
Digit Resolution	6 1/2
Rate	
Moscurement Eulertion	
range	Auto

Math Function	Factory Defaults Setting
Math Stats	Close
Math	Statistic
Math Register	All registers cleared
* dBm Resistance	*600Ω

Trigger Parameter	Factory Defaults Setting
Interval	30ms、200ms、400ms according to Digit Resolution
Samples	1
Hold	0.1%
Trigger Sources	Auto Trigger

High-Speed Data Log	Factor Defaults Setting
Mode	Figure
Start Delay	0s
Start	Manual Range
Stop	Infinity

System Operations	Factor Defaults Setting
* Sound	* Open
* Separate	* Open
Language	Chinese
Display	Natural model
Clock	Time in main interface
Error queue	Frrors cleared
Instrument parameter and data	no rejigger

Interface	Factor Defaults Setting
* GPIB address	*7
* I/O	*USB
*Baud	*9600band
*Parity bit	* no (8 digits)

Calibration	Factor Defaults Setting
Calibration Stats	Password

Parameter with (*) are saved in non-volatile Reading Storage

© 2007 RIGOL Technologies, Inc.

High-Speed Data Log

High-speed data log features: display mode settings, start acquire mode settings, and end acquires mode settings. When finish all settings, press $\frac{Run}{Hold}$ button to initiate the high-speed data log.

Setting high-speed data log parameters

Press $\stackrel{\text{Data}}{\text{Log}}$ button, the display shows:

Select		 		
Log	Scan)	 \square	\square	

Figure 2- 55 The Main Interface of Data Lot

Table 2- 35 Data Log Parameter Setting Function Menu Description

Function Menu	Setting	Description	
Log		Gather the data of DCV, DCI, 2WR or 4WR	
LUY		continuously.	
Scon		Use the scanning mode to test the 16-channels	
Scall		signals continuously.	
t.		Save all changes, back to a higher level menu.	

Notice:

Once in the Data Log mod, do not use the Auto range option function but choose the appropriate range option, thus the Log rates can be guaranteed.

Press Log button enter the data log interface shown below.



Figure 2- 56 The Data Log Setting Interface

© 2007 RIGOL Technologies, Inc.

Table 2- 36 Data Log Menu Description

Function Menu	Setting	Description
Sa/s	1/10m 1/5m 50k/s	To set the sample rate with 13 values from 1/10m to 50k/s.
Start	Trig Delay	To set the sample manner to be Trig or delay.
Stop	Timer REC#	To set the data measurement stop manner to be timer or counter.
Run		Start Log the data.
Ł		Save all the changes, back to a higher level menu.

Press $\stackrel{\text{Data}}{\underset{\text{Log}}{}}$ \rightarrow Log \rightarrow Sa/s, the interface shows below.



Figure 2- 57 The Data Log Rate Setting Interface

Press $\stackrel{\text{(Data)}}{\longrightarrow}$ \rightarrow Log \rightarrow Start, the interface shows below.



Figure 2- 58 The Data Log Start Manner Setting Interface

Press $\stackrel{\text{(Data)}}{\to}$ \rightarrow Log \rightarrow Stop, the interface shows below.

Stop:	
10s	
	ſ.

Figure 2- 59 The Data Log Stop Manner Setting Interface

1. Data Log rate

To set the Data Log sample rate.

Press $\stackrel{\text{Data}}{\longrightarrow}$ \rightarrow Log \rightarrow Sa/s, the interface shows below.



Figure 2- 60 The Data Log Rate Setting Interface

|--|

Function Menu	Setting	Description
1/10m		
1/5m		To set the sample rate with 13 values from
· ·		1/10m to 50k/s.
50k/s		
Ł		Save all the changes, back to a higher level menu.

The system has 13 Data Log rates.

2. The Data Log Trigger and Delay

To set the start condition and the delay time of Data Log.

Press $\stackrel{\text{Data}}{\longrightarrow}$ \rightarrow Log \rightarrow Start, the interface shows below.



Figure 2- 61The Start Condition Setting Interface

	Table 2- 38	The Start	Condition	Setting	Menu	Description
--	-------------	-----------	-----------	---------	------	-------------

Function Menu	Setting	Description
Tria	Manu	Set trigger: Manual
nig	Ext	Set trigger: External
Delay		The time from the start of trigger to the commence of data logging.
÷		Save all the changes, back to a higher level menu.

External trigger

The multimeter receives a trigger signal from the "Ext Trig" at the rear panel. Once at External trigger mode the other trigger is prohibited.

Manual trigger

Press $\frac{\mathbb{R}^{\text{Run}}}{\text{Hold}}$ under the Manual trigger mode to obtain continuous data.

The factory default trigger mode is Manual trigger.

Start delay

The start delay time refers to the time from the first sample to the start of the second sample.

Press $\stackrel{\text{Data}}{\underset{\text{Log}}{\text{Dat}}}$ \rightarrow Log \rightarrow Start \rightarrow Delay, the interface shows below.



Figure 2- 62 The Menu of Start Manner Interface

Table 2- 39 The Start Delay Menu Description

Function Menu	Setting	Description
The set value		The default value of delay time is 0s, use the direction key to set the time needed.
ť		Save all the changes, back to a higher level menu.

3. The Data log stop

To set the conditions to stop Data Log.

Press $\stackrel{\text{Data}}{\underset{\text{Log}}{}}$ \rightarrow Log \rightarrow Stop, the interface shows below.





Table 2- 40 The Stop Condition Menu Explanation

Function Menu	Setting	Explanation
Timer		To set the time of Data Log, stop the sampling
Timer		when the time is over.
REC#		To set the sample points of Data Log, stop the sampling when reach the set number.
Infinity		To set the Data Log don't stop sampling until you force to stop the sampling.
t.		Save all the changes, back to a higher level menu.

Timer

In Stop menu, press Timer button to set the stop time of Data Log, stop the sample when the time is over.



Figure 2-64

- (1). In timer mode, the default value for timer is 10s.
- (2). The setting scope of Timer is from 0s to 4194s.
- (3). Timer parameter is saved in inviolate memory.

REC#

In Stop menu, press REC# button to set the sample points of Data Log, stop the sampling when reach the set number.



Figure 2-65

The setting scope of REC# is from 1 to 2M points. The default setting is 1,000 points.

Infinity

In Stop menu, press Infinity button to set the Data Log don't stop sampling until you force* to stop the sampling.

Stop:
Infinity
Timer REC# Infinity

Figure 2-66

*NOTE:

Press ^(single) button and hold more than two second to stop the sampling of Data Log.

This operation is applied to any Data Log stop mode.

Multi-Route Scanning

DM3054 and DM3064 have a built-in inspection Module with 16 channels for users to perform Multi-Rote Scanning. The measured results could be easily checked or analyzed under connecting with the PC software "Ultralogger". (Refer to the **Standard accessories**)

Connect the Inspection Box

Signals are inputted to the Multimeter through the Inspection Box. In order to measure signals, please do the following steps:

- 1. Open the Inspection Box: remove the bolt and press down the two mechanical-style slots on the surface to open it.
- 2. After open, you will see two rows of terminal and each row corresponds to 8 measurement channels. The name of input terminal and the number of channel are marked near every terminal. (as CH01, LO and HI)
- 3. The channel from CH01 to CH12 in Inspection Box may be used to measure four types of input signal that contains Voltage, 2-Wire Resistance, Capacitance and Diodes, which that is the terminals in grey zone.
- 4. The channel from CH13 to CH16 in Inspection Box may be used to measure Current, which that is the terminals in orange zone.
- 5. The terminal adopts Press mode for connection. First, press corresponding button until the down-lead has been inserted into terminal, and then release so as the down-lead could be hold down firmly.
- 6. After connecting the down-lead, tie up it by using the wire harness at the back of the box.
- 7. Cover the Module and screw down.
- 8. Finally, insert the Inspection Box into the interface (Differential Multiplexer Interface) on the rear panel of DM3000 shown in the following figure:



Figure 2- 67 Connect the Inspection Box



CAUTION:

Diff input voltage 150Vpeak(Max), isolated voltage between channels 150Vpeak(Max), current input terminal 1Apeak(Max), channel isolation >60dB(@10kHz), all terminal to the chassis ground voltage 150Vpeak(Max).

Choose $\frac{D_{ata}}{Log}$, the menu of High-speed data sampling is shown in the following.

Press Scan to set up the multiplexing inspecting function. The Scanning operations include New, Edit and Load, Press $\stackrel{\text{Data}}{\overset{\text{Data}}}{\overset{\text{Data}}{\overset{\text{Data}}{\overset{\text{Data}}}{\overset{\text{Data}}{\overset{\text{Data}}}{\overset{\text{Data}}{\overset{\text{Data}}}{\overset{\text{Data}}{\overset{\text{Data}}{\overset{\text{Data}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}}{\overset{\text{Data}}}{\overset{\text{Data}}}}{\overset{\text{Data}}}{\overset{\text{Data}}}{\overset{\text{Data}}}}}}}}}}}}}}}}}}$

Scan				
	N	ewT	ask	
New	Edit	Load) Run	

Figure 2- 68 Main Interface of Scanning

Function Menu	Setting	Description
New		Create a new Scan task.
Edit		Edit the current Scan task.
Load		Load a stored Scan task.
Run		Implement the current Scan task.
Ł		Store the changing and return.

Table 2-41 The Scanning Menu Description

Create a Scan Task

Press $\stackrel{\text{Data}}{\underset{\text{Log}}{\text{Dat}}}$ \rightarrow Scan \rightarrow New, the Scanning setting menu shows:



Figure 2-69

Table 2- 42 The Scanning Task Menu Explanation

Function Menu	Setting	Explanation
Name		Create the name of the new scan project.
Task		Add the Scan tasks one by one.
Done	Save Apply	Save the setup. Apply the setup.
Ł		Store the changing and return.
To set up the name of the Scanning task

Press Name, and the input interface shown below.

Name: S canTask

Figure 2-70

Position the cursor at the appropriate field to edit.

Press Del, delete the letter on which the cursor sits.

Name:Scarrask	
(A/a/1)))	Del Done 🖃 🗋

Figure 2-71

Press Done after the name entered for the Scanning task.

New	
Scan	Fask1
Name Task	Done 🛋

Figure 2-72

To set up the Scanning task

Press Task, enter the main interface to set up the scanning task.

ĺ	Add	γ	\neg	\square	

Figure 2-73

Press Add, setting one of the entry in the scanning task.



Figure 2-74

Table 2-43 The Task Menu Description

Function Menu	Setting	Description
Chanl		Use the direction key to select which channel the task will use.
Func		Select the measure function.
Range		Select the proper range options.
Res		Select the digits reading precision.
Sa		Set the number of the sampling for the task.
Done		Store the changing and return.

Delete or edit the setting task if needed.

0	Ch1	DCV	400mV	3¾	50
1	Ch2	2WR	4 ΚΩ	4¾	50
2	Ch3	CAP	400nF	5¾	100
Add	De	I TEd	it	γ^{-}	



A new task would be added at the end of the task list. During editing and deleting, only the chosen (highlighted) task is in effect.

Press Done, choose Save or Apply to set the needed task.



Figure 2-76

Press Save, and use the up/down key to choose the location for storing the file.

►C:\	▶ScanTask	File1:
A:X		File2: File3:
Disk	Туре (Save Erase 🚅

Figure 2-77

Press Save, to input a filename so it can be reviewed in the future.

FileName	: 🖪				
ABCD	EFGHIJI	KLMNOF	QRS		<u>IXYZ</u>
[A/a/1]	ľ	ľDε	el ľ C	one (

Figure 2-78

Press Done, when completed.

►C:V	▶ScanTask	File1: B
A:\		File2: File3:
Disk	 Type	Save (Erase)

Figure 2-79

If data saving is not required, press Apply in figure 2-76 to scan and measure.

DCV Manua	al 400m∀3¾)28,452	en Local
Auto Ch1 Item0	12/16/2008	3 12:57:32

Figure 2-80

Operation hint:

- 1. The system will exit the scanning function after the task(s) is over and return the function interface.
- 2. Press (Single) and hold for more than 2 seconds to stop.

Edit the Scan Task

Press Edit in figure 2-68, enter the task editing interface.





Table 2- 44

Function Menu	Setting	Description
Name		Edit the current scan project.
Task		Edit the current scan task.
Done		Confirm this change and save.
Ł		Store the changing and return.

After choosing the scanning task to edit, the later operation is the same as creating a new scanning task.

Load the Scan Task

Press Load in figure 2-68 to load the scan task.

►C:\	▶ScanT	ask 🖡	ile1: B		
		F	ile2:		
		F	ile3:		
Disk	Туре	Read	\square	Erase	Ļ

Figure 2-82

Use the direction key to locate the scanning task file required, and then press Read.

Run the Scan Result

Press Run in figure 2-68 to startup the current scan task and measure.

View the Scan Result

To view the scan result, the PC software Ultralogger has to be connected. Please connect the USB Device on the rear panel of DM3000 with the USB interface on the computer using the USB data cable we provide. See as follow:



Figure 2- 83 Connection between DM3000 and computer

Run the Ultralogger software that has already installed in your computer and operate according to the description of the online help to get the measured results.

How to Use the Built-in Help System

The built-in help system provides application description of each button on the front panel.

Press (Help) button, the display shows below:

1.The	connecting	i method	of	the	test	leads.
2.Mea	surement.					
3.Math).					
4.Sen:	sor.					
Selec	t) (↓ (γ	•	T

Figure 2-84

Table 2-45 Help Function Menu Description

Function Menu	Description
Select	To select the help information you want.
+	Move up the cursor and select the help menu.
Ŧ	Move down the cursor and select the help menu.
+	Enter the last page help menu.
	Enter the next page help menu.
ف	Back to a higher level menu.

Notice: The arrowhead **t** and **t** are hidden before any operation is token. The method of obtaining the help of the keyword:

Use the up/down key to choose the relevant keyword in the help file, press (Auto).

1. Connect the test lead

How to connect the lead in different measurements.

2. Measure

How many functions can get when using Meas.

3. Math measure

How to operate the math measure function when using Meas.

4. Sensor measure

How to operate the sensor measure.

5. To set the Data Log

How to set the content when using Datalog.

6. Storage and read

How to store and read the data/parameter/ sensors/scan task.

7. To set the Utility

The method of setting the Utility.

8. I/O interface

Use method of setting the I/O interface.

9. Help on line

Press and hold the key for more than 3 seconds at any operation interface to obtain Help information of the key.

10. To change the electric power fuse

How to change the electric power fuse.

11. Technique support

Getting the technique support.

Chapter 3 Application Examples

Example 1: Reading Statistic Functions

How to obtain the statistic of the maximum value read in the measurement.

The first reading is taken as the maximum value and being shown on the display. It will be renewed with new maximum value sub sequentially.

Do these steps as follows:

1. To measure an AC Voltage. Connect test leads as shown below:



Figure 3-1 Measure AC Voltage

- 2. Press $\sim v$ button, select AC Voltage measurement function. Choose an appropriate measurement range.
- 3. Set the Statistic measurement function parameters.
 - (1). Press $\stackrel{\text{(Math)}}{\rightarrow}$ Stats \rightarrow Max, choose maximum value measurement.
 - (2). Press 🚽 , save all changes, back to a higher level menu.

- 4. Start Statistical measurement.
 - (1). Press ON, turn on the Statistic measurement function.
 - (2). Press 🚽 , finish this setting.
- 5. Lead test leads into the circuit and start to measure.



Figure 3- 2 The Statistic Maximum Interface

Example 2: Elimination Leads Resistance Error

When measuring smaller resistance, the test leads resistance may causes large measurement deviation.

Do these steps as follow:

1. To measure an Resistance. Connect test leads as shown below:



Figure 3-3 Measure Resistance

2. Press Ω button, select Resistance (2WR) measurement function. Choose an

appropriate measurement range.

- 3. Set the Null measurement function parameters.
 - (1). Short circuit the test leads.
 - (2). Press $\stackrel{\text{(Meas)}}{\rightarrow}$ Null \rightarrow Current to set the Null setting value with current

reading.

- (3). Press 🛋 save this setting.
- (4). Press (Meas) to finish the setting and back to a higher level menu.
- 4. In resistance measurement display interface, press Null, start Null function.
- 5. Lead test leads into circuit and start to measure.



Figure 3-4

Example 3: dBm Measurement

Do these steps as follow:

1. Connect test leads into the circuit as shown below:



Figure 3- 5 Connect the Test Leads

- 2. Press ^(a) button, select Resistance (2WR) measurement function. Choose an appropriate measurement range. Write down the reading count.
- 3. Press $(\sim v)$ button, select AC Voltage measurement function. Choose an appropriate measurement range.
- 4. Set the dBm measurement function parameters.
 - (1). Press $\stackrel{\text{(Math)}}{\rightarrow}$ dBm to set the Resistance measurement value as the dBm setting value.
 - (2). Press 🚽 , save all changes, back to a higher level menu.
- 5. Start dBm measurement.
 - (1). Press $\stackrel{\text{(Math)}}{\rightarrow}$ ON to turn on dBm measurement function.
 - (2). Press 🚽 , and finish this setting.
- 6. Lead test leads into circuit and start to measure. The display is the dBm of the setting resistance.



Figure 3-6

Example 4: dB Measurement

Do these steps as follows:

1. Connect test leads into the circuit as shown below:



Figure 3-7 Measure AC Voltage

- 2. Press ^(a) button, select Resistance (2WR) measurement function. Choose an appropriate measurement range. Write down the reading count.
- Press Math → dBm to set the Resistance measurement value as the dBm setting value.
- 4. Press 🛋 , save all changes, back to a higher level menu.
- 5. Press ~v button, select AC Voltage measurement function. Choose an appropriate range.
- 6. Set the Total measurement function parameters.
 - (1). Press $\stackrel{\text{Math}}{\rightarrow}$ dB, set the dB measurement setting value with the direction key.
 - (2). Press **1**, save all changes, back to a higher level menu.
- 7. Start dB measurement.
 - (1). Press $\stackrel{\text{(Math)}}{\rightarrow}$ ON, turn on dB measurement function.
 - (2). Press -, finish this setting and close this menu.

8. Lead test leads into circuit and start to measure.



Figure 3-8

Example 5: Limit Test

Do these steps as follows:

1. To measure a DC Voltage. Connect test leads as shown below:



Figure 3-9 Measure DC Voltage

- 2. Press $\xrightarrow{(mv)}$ button, select DC Voltage measurement function. Choose an appropriate measurement range.
- 3. Set the Limit measurement function parameters.
 - (1). Press $\stackrel{\text{(Math)}}{\rightarrow}$ Limit \rightarrow High, Set up the upper value.

(2). Press $\stackrel{\text{(Math)}}{\rightarrow}$ Limit \rightarrow Low, Set up the lower value.

(3). Press 🚽 , save all changes, back to a higher level menu.

- 4. Start Limit measurement.
 - (1). Press $(Math) \rightarrow ON$, turn on Limit measurement function.
 - (2). Press \rightarrow to finish this setting.
- 5. Lead test leads into circuit and start to measure.



Figure 3-10

Example 6: Temperature Sensor

Setting a sensor is the same way of setting up a temperature sensor. So it needs to set the sensor name, sensor type, sensor physical unit, sensor reference data, and mathematical operations.

Do these steps as following:

1. Load the PT100 RTD temperature sensor project.

The DM3000 has already built-in a temperature sensor project. With this built-in project you can use a temperature sensor convenient.

Press $\stackrel{\text{Sensorl}}{\rightarrow}$ Load button, select load function.

► C:\	Sensor	File1: PT100ITS4W
		File2:
		File3:
Disk	Type Rea	ad Erase 🚅

Figure 3-11

Press Read button, load this project file. Press back to a higher level menu.

SENSOR	Sensor	672	Rmt
0	$\cap \cap \cap$		
	0.00	0,00	
New Ec	lit Load	History Dis	sp (Hide)

Figure 3-12

Press Edit button, enter the Edit Object menu.

Edit O	oject					
Last	<u> </u> Current	```	(ľ	ľ.	÷ ì

Figure 3-13

Press Current button, enter the menu below.

Edit			
PT1	1001	TS	
Prpty Define	- Y) Done)	t

Figure 3-14

Press Done button, enter the menu below.



Figure 3-15

Press Apply button, to use the PT100 RTD temperature sensor project.

- 2. Build a new temperature sensor project.
 - (1). Press (sensor) button, select the sensor function.



Figure 3-16

(2). Press New \rightarrow Prpty, select the proper function interface.



Figure 3-17

a) Press Name, to input the name of this sensor: SensorT.

Name:Sensor	
ABCDEFGHIJKLM	INOPQRSTUVWXYZ
A/a/1)	Del Done 🗖 🛋

Figure 3-18

b) Press Type, to select the type of the sensor: Resistance.



Figure 3-19

c) Press Unit $\rightarrow \mathbb{C}$, select the unit of the sensor: \mathbb{C} .



When finish a proper input, press - to save all the changes and back to a higher level menu.

(3). Press Define button, the interface shows below:

Ad		 Υ	Тор	End	Υ	

Figure 3- 21

- (4). Press Add button, input the first group of reference value: 111.480 Ω , 29.5 °C.
- (5). In Define interface, Press SEG \rightarrow Arith \rightarrow Line, Select the arithmetic: Line.



Figure 3-22

When finishing this group of reference value, press Done button, save all changes, and continue to input other values.

1	111.4800Ω	29.5000°C	🚩 Line
2	112.5700Ω	32.5000°C	
3	113.8450Ω	35.5000°C	
Ad	d Del Edi	t Top End	

Figure 3-23

It allows deleting and editing the reference values that had been entered, select the group of reference value then press Del or Edit to perform the operations required. When you finish inputting all the data, press \rightarrow and save all the changes, back to a higher level menu.

(6). Press \rightarrow Done \rightarrow Apply, save all the data into the local storage, and applies it immediately.



Figure 3-24

- (7). According to the sensor type, select an appropriate connection method.
 - a) Voltage, resistance, frequency sensor:



Figure 3-25

b) Current sensor:



Figure 3-26

Example 7: Reading Hold

Do these steps as follows:

1. To measure a DC Voltage. Connect test leads as shown below:



Figure 3-27

- 2. Press mv button, select DC Voltage measurement function. Choose an appropriate measurement range.
- 3. Set the Hold measurement function parameters.
 - (1). Press $^{\text{Trig}} \rightarrow \text{Auto} \rightarrow \text{Hold} \rightarrow 0.1\%$, set up the hold scope to 0.1%.
 - (2). Press 🚽 , to save all changes, back to a higher level menu.
 - (3). Press 🚽 , to back to a higher level menu.
- 4. When the $\frac{Run}{Hold}$ was lit, press this button once, the button will blink, it means the

trigger mode is now Hold mode. If current trigger mode is single, press $\frac{Run}{Hold}$ button twice.

5. Lead test leads into circuit, start to measure.



Figure 3-28

Chapter 4 Prompt Messages& Troubleshooting

Prompting Message

1. Delay time is 400 to 2000ms

In trigger setting, the setting value scope of auto trigger delay time is $400 \sim 2000$ ms.

2. No useful Math

Currently measurement function is not available for Math function.

3. The range of the short resistance is 1Ω to 2000Ω

In continuity measurement, the short-current resistance setting value scope is $1\Omega{\sim}2000\Omega.$

4. Sample is 1 to 50,000

Single trigger sampling number scope is 1~ 50,000.

5. Achieves the Maximum number

In sensor setting, the reference value number gets the max value.

6. Number of reference value is **

The sensor reference value number is: **.

7. Resistance is $-120M\Omega$ to $+120M\Omega$

In limit test and null value settings the resistance value scope: -120M Ω ~120M Ω .

8. The periods setting value must larger than $1\mu s$

In limit test and null value settings the periods setting value should be bigger than $1 \mu \text{s}.$

9. Value is unable

Null value function setting value cannot surpass the measuring range scope.

10. Upper limit should larger than lower limit

In limit measurement the Upper limit should larger than lower limit.

11. GPIB address is from 0 to 31

GPIB I/O interface address setting value scope: $0 \sim 31$.

12. DCV is -1200V to 1200V

In limit test and null value settings the DC voltage setting value scope is -1200V \sim 1200V.

13. DCI is 0 to 12A

In limit test and null value settings the DC current setting value scope is 0~12A.

14. dB is -200dBm to 200dBm

In dB measurement function, the dB setting value scope is -200dBm ~200dBm.

15. dBm is 0 to 8000Ω

In dBm measurement function, the setting value scope is $0 \sim 8000\Omega$.

16. ACV is -900V to 900V

In limit test and null value settings the AC voltage setting value scope is -900V~900V.

17. ACI is 0 to 12A

In limit test and null value settings the AC current setting value scope is 0~12A.

18. Maximum value is **

Currently measurement function Max setting value: **.

19. Minimum value is **

Currently measurement function Min setting value: **.

20. Unused

The measurement for the forestall measuring function is unused for currently measuring function.

21. Confirm to Change settings?

Load the selected file or not.

22. Delete File?

Delete the selected file or not.

Troubleshooting

- **1.** When press the power switch, the multimeter has blank screen with nothing displaying:
- (1). Check if the power is correctly connected.
- (2). Check if the main power switch on the back panel has been turn on.
- (3). Check if the safety fuse has been blown, replace with a new one if necessary.
- (4). Having done with the above steps, restart the instrument.
- (5). If it still cannot work properly, please contact the local **RIGOL** Support center, let's serve for you.

2. When connecting a current signal, the reading has any change:

- (1). Check if the test lead is correctly connected to current jack or the LO jack.
- (2). Check if the measure location has switched to the DCI or ACI place correctly.
- (3). Check if the measure location has switched to the DCI or ACI place correctly.
- (4). Check whether the input is ACI but the shelves location is DCI.
- 3. When connecting a DC power signal, the reading display is abnormality:
- (1). Check if the test lead is correctly connected with the current jack or the LO jack.
- (2). Check if the safety fuse in the current location on the back panel has been blown.
- (3). Check the measure location has switched to the DCI or DCV place correctly.
- (4). Check whether the input is DCI but the shelves location is ACI.

To Change the Electric Power Fuse

The electric power fuse located in the rear of the Multimeter, the fuse is a kind of delay, no-burst, 250V/300mAT, $5 \times 20mm$ one.

Operation steps

- 1. Disconnect the power. Use the tool to press down the block (as the dashed line point out), and then pull out the seat of the fuse.
- 2. Choose the correct voltage shelves location in the voltage selected switches.
- 3. Enclose the seat of the fuse to the slot after placed the fuse.



Figure 4- 1 The sketch diagram of changing the fuse

Chapter 5 Characteristics

Characteristics for DM306x

DC Characteristics

					· · · · J	··· · J-/
Function	Range ^[3]	Test Current or Burden Voltage	24 Hour ^[2] Tcal±1°C	90 Day Tcal±5°C	1 Year Tcal±5℃	Temperature Coefficient 0 °C to (Tcal-5 °C) (Tcal + 5 °C) to 55 °C
	200.0000mV		0.0030+0.0030	0.0065+0.0065	0.0085+0.0070	0.0005+0.0007
	2.000000V		0.0020+0.0006	0.0060+0.0007	0.0078+0.0007	0.0005+0.0001
DC Voltago	20.0000V		0.0020+0.0004	0.0065+0.0005	0.0085+0.0005	0.0005+0.0001
voitage	200.0000V		0.0020+0.0006	0.0082+0.0011	0.0100+0.0012	0.0007+0.0002
	1000.000V ^[5]		0.0025+0.0006	0.0095+0.0010	0.0110+0.0010	0.0010+0.0001
	2.000000mA	<0.03V	0.010+0.014	0.060+0.035	0.076+0.050	0.0027+0.0070
	20.0000mA	<0.3V	0.010+0.002	0.058+0.006	0.075+0.006	0.0027+0.0007
DC	200.0000mA	<0.3V	0.020+0.002	0.065+0.005	0.081+0.005	0.0027+0.0008
current	1.00000A	<0.3V	0.020+0.016	0.065+0.030	0.073+0.030	0.0027+0.0062
	10.0000A ^[7]	<0.6V	0.300+0.020	0.330+0.020	0.330+0.020	0.0030+0.0025
	200.0000Ω	1mA	0.0106+0.0097	0.018+0.011	0.020+0.011	0.0008+0.0007
	2.000000kΩ	1mA	0.0022+0.0011	0.010+0.002	0.015+0.002	0.0008+0.0001
[4]	20.0000kΩ	100uA	0.0020+0.0006	0.010+0.001	0.015+0.001	0.0008+0.0001
Resistance ¹⁺¹	200.0000kΩ	10uA	0.0020+0.0005	0.010+0.001	0.015+0.001	0.0008+0.0001
	1.00000MΩ	2uA	0.0020+0.0010	0.010+0.001	0.015+0.001	0.0008+0.0002
	10.0000MΩ	200nA	0.0112+0.005	0.0550+0.006	0.056+0.006	0.0060+0.0004
	100.000MΩ	200nA 10MΩ	0.300+0.010	0.800+0.011	0.800+0.015	0.1500+0.0002
Diode Test	2.4000V ^[6]	1mA	0.005+0.050	0.008+0.050	0.010+0.050	0.0010+0.0020
Continuity	2000Ω	1mA	0.005+0.050	0.008+0.050	0.010+0.050	0.0010+0.0020

Accuracy Specifications (% of reading + % of range)^[1]

- [1] Specifications are for 60 minutes warm–up and select 61/2 reading resolution.
- [2] Relative to calibration standards.
- [3] 20% over range on all ranges, except DCV 1000V, ACV 750V, DCI and ACI 10A range.
- [4] Specifications are for 4-wire resistance function, or 2-wire resistance using Math Null. Without Math Null, add 0.2 Ω additional errors in 2-wire resistance function.
- [5] For each additional volt over \pm 500 VDC add 0.02 mV of error.
- [6] Accuracy specifications are for the voltage measured at the input terminals only. 1mA test current is typical. Variation in the current source will create some variation in the voltage drop across a diode junction.
- [7] For current terminal, > 7A DC or ACRMS for 30 seconds ON and 30 seconds OFF.

Settling Considerations

Reading settling times are affected by source impedance, cable dielectric characteristics, and input signal changes. Typically, settling time <1.5s when source impedance less than $1k\Omega$.

AC Characteristics

					(,
						Temperature
Franction	Downo ^[3]	Frequency	24 Hour ^[2]	90 Day	1 Year	Coefficient
Function	Range	Range	Tcal±1℃	Tcal±5 ℃	Tcal±5℃	0°C to (Tcal–5 °C) (Tcal
						+ 5 °C) to 55 °C
		3Hz-10Hz	5.0+0.05	5.0+0.07	5.1+0.07	0.15+0.006
		10Hz-40Hz	0.53+0.05	0.57+0.06	0.60+0.07	0.035+0.004
	200 0001/	40Hz-20kHz	0.08++0.05	0.14+0.06	0.15+0.07	0.005+0.004
	200.000mv	20kHz-50kHz	0.10+0.05	0.14+0.06	0.16+0.05	0.011+0.005
-		50kHz-100kHz	0.5+0.10	0.6+0.20	0.60+0.20	0.06+0.008
True		100kHz-300kHz	4.0+0.80	4.5+0.80	4.50+0.80	0.2+0.02
		3Hz-10Hz	5.0+0.05	5.0+0.07	5.10+0.07	0.15+0.006
voltage		10Hz-40Hz	0.35+0.05	0.37+0.06	0.38+0.07	0.035+0.003
	2.00000V to	40Hz-20kHz	0.08+0.05	0.10+0.06	0.11+0.07	0.005+0.003
	750.00V	20kHz-50kHz	0.40+0.05	0.40+0.06	0.40+0.07	0.011+0.005
		50kHz-100kHz	0.55+0.10	0.60+0.10	0.60+0.10	0.07+0.008
		100kHz-300kHz	4.0+0.80	4.0+0.80	4.00+0.80	0.2+0.02
	20.0000mA	3Hz-10Hz	5.0+0.05	5.1+0.07	5.1+0.07	0.15+0.006
		10Hz-40Hz	0.55+0.05	0.61+0.06	0.64+0.07	0.035+0.006
		40Hz-5kHz	0.13+0.05	0.18+0.06	0.22+0.07	0.015+0.006
		5kHz-10kHz	0.20+0.25	0.2+0.25	0.22+0.25	0.03+0.006
		3Hz-10Hz	5.0+0.05	5.1+0.07	5.1+0.07	0.15+0.006
	200.000~1	10Hz-40Hz	0.55+0.05	0.62+0.06	0.64+0.07	0.035+0.006
Trave	200.000MA	40Hz-5kHz	0.13+0.05	0.20+0.06	0.22+0.07	0.015+0.006
		5kHz-10kHz	0.20+0.25	0.20+0.25	0.22+0.25	0.03+0.006
		3Hz-10Hz	5.0+0.16	5.1+0.25	5.2+0. 27	0.24+0.047
Current	1 000004	10Hz-40Hz	0.64+0.16	0.70+0.25	0.71+0.27	0.035+0.047
	1.0000A	40Hz-5kHz	0.22+0.16	0.28+0.25	0.29+0.27	0.015+0.047
		5kHz-10kHz	0.35+0.2	0.35+0.4	0.35+0.4	0.03+0.047
		3Hz-1Hz	5.3+0.05	5.40+0.07	5.4+0.07	0.24+0.006
	10,000047	10Hz-40Hz	0.8+0.05	0.9+0.06	0.9+0.07	0.035+0.006
	TO'00004	40Hz-5kHz	0.40+0.06	0.90+0.06	0.90+0.06	0.015+0.006
		5kHz-10kHz	0.42+0.1	0.75+0.06	0.75+0.06	0.03+0.006

Accuracy Specifications (% of reading + % of range)^[1]

- [1] Specifications are for 60 minute warm–up and select 61/2 reading resolution.
- [2] Relative to calibration standards.
- [3] 20% over range on all ranges, except DCV 1000V, ACV 750V, DCI and ACI 10A range.
- Specifications are for sine wave input >5% of range. For inputs from 1% to 5% of range and <50 kHz, add 0.1% of range additional error. For 50 kHz to 100 kHz, add 0.13% of range.
 750 Vac range limited to 100 kHz or 8x10⁷ Volt-Hz.
- [5] Specifications are for sine wave input >5% of range. Add 0.1% of the range for the sine wave input is 1%~5% of the range.
- [6] For current terminal, > 7A DC or ACRMS for 30 seconds ON and 30 seconds OFF.

Low Frequency Performance

Three filter settings are available: Slow: 3Hz~300kHz Mid: 20Hz~300kHz Fast: 200Hz~300kHz

Frequencies greater than these filter settings are specified with no additional errors.

Settling Considerations

Applying >300VRMS (or >2ARMS) will cause self-heating in signal-conditioning components. These errors are included in the instrument specifications. Internal temperature changes due to self-heating may cause additional error on lower ac voltage ranges. The additional error will be less than 0.02% of reading and will generally dissipate within a few minutes.

Frequency Period Characteristics

Accuracy Specifications (% of reading)^[1]

						Temperature
Function	Pango ^{[3}	Frequency	24 Hour ^[2]	90 Day	1 Year	Coefficient
	Range	Range	Tcal±1℃	Tcal±5℃	Tcal±5℃	0 ℃ to (Tcal–5 ℃) (Tcal
						+ 5 °C) to 55 °C
		3Hz-5Hz	0.07	0.07	0.07	0.005
	200mV to 750V ^[3]	5Hz-10Hz	0.04	0.04	0.04	0.005
		10Hz-40Hz	0.02	0.02	0.02	0.001
Frequency		40Hz-300kHz	0.005	0.006	0.007	0.001
Pendu		3Hz-5Hz	0.07	0.07	0.07	0.005
	20mA to 104 ^[4]	5Hz-10Hz	0.04	0.04	0.04	0.005
	IO TOA	10Hz-10kHz	0.005	0.006	0.007	0.001

- [1] Specifications are for 60 minute warm–up and select 6½ reading resolution..
- [2] Relative to calibration standards.
- [3] For AC input voltages 10% to 120% of range except where noted. 750V range limited to 750VRMS. 100mV range specifications are for full scale or greater inputs. For inputs from 10mV to 100mV, multiply total % of reading error by 10.
- [4] For the 20mA, 200mA, 10A ranges, the AC input current from 10% to 120% of range except where noted.For 1A range, the AC input current from 50% to 120% of range except where noted.

Measurement Considerations

All frequency counters are susceptible to error when measuring low–voltage, low–frequency signals. Shielding inputs from external noise pickup is critical for minimizing measurement errors.

Settling Considerations

Errors will occur when attempting to measure the frequency or period of an input following a dc offset voltage change. The input blocking RC time constant must be allowed to fully settle (up to 1 sec) before the most accurate measurements are possible.

Capacitance Characteristics

Accuracy Specifications (70 of reading + 70 of range)				
Function	Range ^{[2}	Test Current		Temperature
			1 Year	Coefficient
			Tcal±5℃	0 °C to (Tcal–5 °C) (Tcal+
				5°C) to 55°C
Capacitance	2.000n F	200nA	2 + 2.5	0.05+0.05
	20.00n F	1uA	1 + 0.5	0.05+0.01
	200.0n F	10uA	1 + 0.5	0.01+0.01
	2.000u F	100uA	1 + 0.5	0.01+0.01
	20.00u F	1mA	1 + 0.5	0.01+0.01

Accuracy Specifications (% of reading + % of range)^[1]

- [1] Specifications are for 60 minute warm–up using Math Null. Additional errors may occur for non–film capacitors.
- [2] Specifications are for 1% to 120% of range on the 1nF range and 10% to 120% of range on all other ranges.

Measuring Characteristics

DC Voltage

Measurement Method:	Sigma Delta A-to-D converter.
Input Resistance:	
200mV, 2V, 20V ranges	Selectable $10M\Omega \pm 2\%$ or $>10G\Omega$
200V, 1000V ranges	10MΩ ± 2%

Resistance

Measurement Method:	Selectable 4-wire or 2-wire.
	Current source referenced to LO input.
Open-circuit Voltage:	Limit in <7V.
Max. Lead Resistance:	10% of range per lead for 200Ω, $1k\Omega$ range. $1k\Omega$ per lead
(4-wire ohms)	on all other ranges.
Input Protection:	1000V on all ranges.

DC Current

Shunt Resistor:	0.025Ω for 1A, 10A
	1.025Ω for 200mA
	11.025Ω for 2mA, 20mA
Input Protection:	Externally accessible 10A, 250V fuse
	Internal 12A, 250V fuse

Continuity / Diode Test

Response Time:	25 samples / sec
Measurement Method:	1mA $\pm 0.2\%$ test current, Limit in $<7V$
Continuity Threshold:	Adjustable from 1Ω to 2000Ω
Input Protection:	1000V

True RMS AC Voltage

AC-coupled True RMS - measures the ac component of input with up to
400Vdc of bias on any range.
$1M\Omega \pm 2\%$, in parallel with <100pF
750VRMS all ranges

True RMS AC Current

Measurement Method:	Direct coupled to the fuse and shunt. AC-coupled True RMS measurement
	(measures the ac component only)
Max. Input:	The DC + AC current peak value $<300\%$ of the range. The RMS current
	including DC current <10A.

Shunt Resistor:	0.025Ω for 1A, 10A,
	1.025Ω for 200mA,
	11.025Ω for 20mA
Input Protection:	Externally accessible 10A, 250V fuse
	Internal 12A, 250V fuse
Frequency and Period	
Measurement Method:	Reciprocal-counting technique. AC-coupled input
	measurement function.

Input Impedance (Voltage Signal): 1M Ω \pm 2%, in parallel with <100pF		
Shunt Resistor (Current Signal):	0.025Ω for 1A, 10A,	
	1.025Ω for 200mA,	
	11.025Ω for 20mA	
Input Protection:	750VRMS all ranges;	
	Externally accessible 10A, 250V fuse	
	Internal 12A, 250V fuse	

Capacitance

Measurement Method:	Current input with measurement of resulting ramp.
Connection Type:	2-wire

Triggering and Memory

Samples per Trigger:	1 to 2,000,000
Trigger Delay:	0 to 3600 sec
Input Level:	TTL compatible (High level when left trigger input open)
Trigger Condition:	Selectable Rising, Falling, Low-level, High-level.
Input Impendence:	>20k Ω , in parallel with 400pF, AC-coupled
Delay:	<1µs
Min Pulse width:	1µs
VMC Output:	
Level:	TTL compatible (Input to $\geq 1k\Omega$ load)
Output Polarity:	Selectable Positive, Negative
Output Impendence:	200Ω, typical
Nonvolatile Memory:	512k readings
Volatile Memory:	2M readings

using the ac voltage

Inspection Function on Rear Panel (for DM3064 and DM3054)



CAUTION:

The voltage limit that the LO terminal relatives to the chassis ground is 150Vpeak (Max).

Channels: 12 differential voltage channels, 4 differential current channels. Measurement Functions: 2WR, Capacitance, DCV, DCI, ACV, ACI, Diodes , frequency and Period. Work characteristic: Thermo emf <6uV. Maximum scanning rate is 2 channels per second. Input characteristic: Diff input voltage 150Vpeak(Max), isolated voltage between channels 150Vpeak(Max), current input terminal 1Apeak(Max), channel isolation >60dB(@10kHz), all terminal to the chassis ground voltage 150Vpeak(Max). Current channel protection: Inner current channel 2A self- recover fuse

Voltage channel protection: 100 voer voltage protection.

Real-time Clock

Precision:	1min/month (Environment Temperature >0 $^\circ \rm C$)
Clock battery Life:	2 years

Math Functions

Null, Min/Max/Average, dBm, dB, Limit Test (with TTL output)

Other Functions

Reading Hold, Ratio Measurement

High-speed Sampling

50kSa/s (In DataLog function)

Reading Resolution

2,400,000 Count, >6 1/2 digits

USB I/O Interface

USB Host, USB Device interface. It can support U-disk and USB printer.

Other I/O Interface

RS-232, GPIB (Selectable) support for SCPI command, LAN (Selectable)

General Specifications

256 x 64 pixels LCD to support multi-display, menu, multi-language help and waveform display.
Support Microsoft® Windows 98/Me, Windows 2000/XP
100V/ 120V/ 220V/ 240V ±10%
45Hz to 66Hz
20VA peak
Full accuracy for 0 $^\circ\mathrm{C}$ to 55 $^\circ\mathrm{C},$ 95% R.H. at 40 $^\circ\mathrm{C}$ non-condensing
-20°C to 70°C
Measurement CAT II 300V, CAT I 1000V. Pollution Degree 1.
Mil-T-28800E, Type III, Class 5 (Sine Only)
2.5kg
107.0mm x 231.6mm x 290.5m
Characteristics for DM305x

DC Characteristics

		Toct Current			Temperature
Eurotion	Pange ^[2] or Burden	or Burden	Input	1 Year	Coefficient
T difedori	Range	Voltage	Impedance	23℃±5℃	0 °C to 18 °C
		Voltage			28 °C to 55 °C
	400.000mV		10MΩ or>10GΩ	0.025 + 0.008	0.0015+0.0005
	4.00000V		10MΩ or>10GΩ	0.025 + 0.006	0.0010+0.0005
DC Voltage	40.0000V		10ΜΩ	0.025 + 0.006	0.0020+0.0005
Voluge	400.000V		10ΜΩ	0.030 + 0.006	0.0020+0.0005
	1000.00V ^[4]		10ΜΩ	0.030 + 0.005	0.0015+0.0005
	2.00000mA	<0.03V		0.050 + 0.070	0.0040+0.0070
	20.0000mA	<0.3V		0.050 + 0.008	0.0040+0.0007
DC	200.000mA	<0.3V		0.050 + 0.009	0.0040+0.0008
Current	1.00000A	<0.3V		0.100 + 0.070	0.0100+0.0062
	10.0000A ^[5]	<0.6V		0.200 + 0.007	0.0100+0.0007
	400.000Ω	1mA		0.050 + 0.010	0.0030+0.0005
	4.00000kΩ	100uA		0.015 + 0.006	0.0030+0.0005
Resistance ⁽³⁾	40.0000kΩ	10uA		0.015 + 0.006	0.0030+0.0005
	400.000kΩ	2uA		0.030 + 0.007	0.0030+0.0005
	4.00000ΜΩ	200nA		0.060 + 0.010	0.0030+0.0005
	100.000ΜΩ	200nA 10MΩ		2.00 + 0.005	0.1500+0.0005
Diode Test	2.4000V ^[6]	1mA		0.05 + 0.010	0.0050+0.0005
Continuity	2000Ω	1mA		0.05 + 0.010	0.0050+0.0005

Accuracy Specifications (% of reading + % of range)^[1]

- [1] Specifications are for 60 minute warm–up, selecting 5 3/4 reading resolution and calibration temperature 18 ℃ 28 ℃.
- [2] 20% over range on all ranges, except DCV 1000V, ACV 750V, DCI and ACI 10A range.
- [3] Specifications are for 4-wire resistance function, or 2-wire resistance using Math Null. Without Math Null, add 0.2 Ω additional errors in 2-wire resistance function.
- [4] For each additional volt over \pm 500 VDC add 0.02 mV of error.
- [5] For current terminal, > 7A DC or ACRMS for 30 seconds ON and 30 seconds OFF.
- [6] Accuracy specifications are for the voltage measured at the input terminals only. 1 mA test current is typical.

Variation in the current source will create some variation in the voltage drop across a diode junction.

Settling Considerations

Reading settling times are affected by source impedance, cable dielectric characteristics, and input signal changes. Typically, settling time <1.5s when source impedance less than $1k\Omega$.

AC Characteristics

				Temperature
Function	Range ^[2]	Frequency Range	1 Year	Coefficient
I diredon			23°C±5° C	0°C to 18°C
				28 °C to 55 °C
		10Hz-45Hz	1.0 + 0.1	0.02+0.02
	200.000m\/	45Hz-20kHz	0.2 + 0.1	0.02+0.02
	200.000111	20kHz-50kHz	2.0 + 0.2	0.02+0.02
True RMS AC		50kHz-100kHz	4.0 + 0.2	0.02+0.02
Voltage		10Hz-45Hz	1.0 + 0.1	0.02+0.02
	2V to	45Hz-20kHz	0.2 + 0.1	0.02+0.02
	750.00V	20kHz-50kHz	1.0 + 0.1	0.02+0.02
		50kHz-100kHz	2.0 + 0.2	0.02+0.02
	20.0000mA	10Hz-45Hz	1.5+0.1	0.02+0.02
		45Hz-2kHz	0.5+0.1	0.02+0.02
		2kHz-10kHz	2.0+0.2	0.02+0.02
	200.000mA	10Hz-45Hz	1.5+0.1	0.02+0.02
		45Hz-2kHz	0.5+0.1	0.02+0.02
True RMS AC		2kHz-10kHz	2.0+0.2	0.02+0.02
Current ^[4,6]	1.00000A	10Hz-45Hz	1.5+0.5	0.02+0.05
		45Hz-2kHz	0.5+0.5	0.02+0.05
		2kHz-10kHz	2.0+0.5	0.02+0.05
	10.0000A[6]	10Hz-45Hz	1.5+0.1	0.02+0.02
		45Hz-2kHz	0.5+0.1	0.02+0.02
		2kHz-5kHz	2.0+0.2	0.02+0.02

Accuracy Specifications (% of reading + % of range)^[1]

- [1] Specifications are for 60 minute warm-up and select 5 3/4 reading resolution.
- [2] 20% over range on all ranges, except DCV 1000V, ACV 750V, DCI and ACI 10A range.
- Specifications are for sine wave input >5% of range. For inputs from 1% to 5% of range and <50 kHz, add 0.1% of range additional error. For 50 kHz to 100 kHz, add 0.13% of range.
 750 Vac range limited to 100 kHz or 8x10⁷ Volt-Hz.
- [4] Specifications are for sine wave input >5% of range. Add 0.1% of the range for the sine wave input is 1%~5% of the range.
- [5] For current terminal, > 7A DC or ACRMS for 30 seconds ON and 30 seconds OFF.
- [6] Typically 30% of reading error at 100kHz.

Low Frequency Performance

Three filter settings are available: Slow: 3Hz~300kHz

Mid: 20Hz~300kHz

Fast: 200Hz~300kHz

Frequencies greater than these filter settings are specified with no additional errors.

Settling Considerations

Applying >300VRMS (or >1ARMS) will cause self-heating in signal-conditioning components. These errors are included in the instrument specifications. Internal temperature changes due to self-heating may cause additional error on lower ac voltage ranges. The additional error will be less than 0.02% of reading and will generally dissipate within a few minutes.

Frequency Period Characteristics

				5/
				Temperature
Eunction	Range	Frequency	1 Year	Coefficient
Function		Range	23℃±5℃	0 °C to 18 °C
				28 °C to 55 °C
	200mV to 750V ^[2]	3Hz-5Hz	0.10	0.005
		5Hz-10Hz	0.07	0.005
_		10Hz-40Hz	0.02	0.005
Period		40Hz-300kHz	0.02	0.005
renou	20mA to10A ^[3]	3Hz-5Hz	0.10	0.005
		5Hz-10Hz	0.07	0.005
		10Hz-10kHz	0.02	0.005

Accuracy Specifications (% of reading)^[1]

- [1] Specifications are for 60 minute warm–up.
- [2] For AC input voltages 10% to 120% of range except where noted. 750V range limited to 750VRMS. 100mV range specifications are for full scale or greater inputs. For inputs from 10mV to 100mV, multiply total % of reading error by 10.
- [3] For the 20mA, 200mA, 10A ranges, the AC input current from 10% to 120% of range except where noted.For 1A range, the AC input current from 50% to 120% of range except where noted.

Measurement Considerations

All frequency counters are susceptible to error when measuring low–voltage, low–frequency signals. Shielding inputs from external noise pickup is critical for minimizing measurement errors.

Settling Considerations

Errors will occur when attempting to measure the frequency or period of an input following a DC offset voltage change. The input blocking RC time constant must be allowed to fully settle (up to 1 sec) before the most accurate measurements are possible.

Capacitance Characteristics

Accuracy Specifications (% of reading + % of range) ^[1]				
	Range ^[2]	Test Current		Temperature
Function			1 Year	Coefficient
runcuon			23℃±5℃	0°C to 18°C
				28 °C to 55 °C
Capacitance	4.000n F	1uA	2 + 2.5	0.05+0.05
	40.00n F	10uA	1 + 0.5	0.05+0.01
	400.0n F	10uA	1 + 0.5	0.01+0.01
	4.000u F	1mA	1 + 0.5	0.01+0.01
	40.00u F	1mA	1 + 0.5	0.01+0.01
	200.0u F	1mA	1 + 0.5	0.01+0.01

[1] Specifications are for 60 minute warm–up using Math Null. Additional errors may occur for non–film capacitors.

[2] Specifications are for 1% to 120% of range on the 1nF range and 10% to 120% of range on all other ranges.

Measuring Characteristics

DC Voltage

Sigma Delta A-to-D converter.
Selectable $10M\Omega \pm 2\%$ or $>10G\Omega$
10MΩ ± 2%

Resistance

Selectable 4-wire or 2-wire.
Current source referenced to LO input.
Limit in <7V.
10% of range per lead for $400\Omega,1k\Omega$ per lead
on all other ranges.
1000V on all ranges.

DC Current

Shunt Resistor:	0.025Ω for 1A, 10A
	1.025Ω for 200mA
	11.025Ω for 2mA, 20mA
Input Protection:	Externally accessible 10A, 250V fuse
	Internal 12A, 250V fuse

Continuity / Diode Test

Measurement Method:	1mA ±0.2% test current, Limit in ${<}8{\rm V}$
	$111A \pm 0.2\%$ Lest current, Limit in $<0V$

Response Time:	25 samples / sec
Continuity Threshold:	Adjustable from 1Ω to 2000Ω
Input Protection:	1000V

True RMS AC Voltage

Measurement Method:	AC coupled true-RMS-measure the ac component of input with up to
	400Vdc of bias on any range
Input Impedance:	$1M\Omega \pm 2\%$, in parallel with 100pF
Input Protection:	750VRMS all ranges

True RMS AC Current

Measurement Method:	Direct coupled to the fuse and shunt. AC coupled true RMS measurement
	(measures the ac component only)
Max. Input:	The DC + AC current peak value $<300\%$ of the range. The RMS current
	including DC current <10A.

Shunt Resistor:	0.025Ω for 1A, 10A,
	1.025Ω for 200mA,
	11.025Ω for 20mA
Input Protection:	Externally accessible 10A, 250V fuse
	Internal 12A, 250V fuse
Frequency and Period	
Measurement Method:	Reciprocal-counting technique. AC-coupled input using the ac voltage
	measurement function.
Input Impedance (Voltage Signal):1M Ω ± 2%, in parallel with <150pF
Shunt Resistor (Current Signal):	0.025Ω for 1A, 10A,
	1.025Ω for 200mA,
	11.025Ω for 20mA
Input Protection:	750VRMS all ranges;
	Externally accessible 10A, 250V fuse
	Internal 12A, 250V fuse
Capacitance	
Measurement Method:	Current input with measurement of resulting ramp.

Measurement Method:	Current input with measurement of resulting ramp.
Connection Type:	2-wire

Triggering and Memory

1 to 2,000,000
0 to 3600 sec
TTL compatible (High level when left trigger input open)
Selectable Rising, Falling, Low-level, High-level.
>20k Ω , in parallel with 400pF, AC-coupled
<1µs
1µs
TTL compatible (Input to $\geq 1k\Omega$ load)
Selectable Positive, Negative
200Ω, typical
512K readings
2M readings

Inspection Function on Rear Panel (for DM3064 and DM3054)

The voltage limit that the LO terminal relatives to the chassis ground is 150Vpeak (Max).

Channels: 12 differential voltage channels, 4 differential current channels. Measurement Functions: 2WR, Capacitance, DCV, DCI, ACV, ACI, Diodes , frequency and Period. Work characteristic: Thermo emf <6uV. Maximum scanning rate is 2 channels per second. Input characteristic: Diff input voltage 150Vpeak(Max), isolated voltage between channels 150Vpeak(Max), current input terminal 1Apeak(Max), channel isolation >60dB(@10kHz), all terminal to the chassis ground voltage 150Vpeak(Max). Current channel protection: Inner current channel 2A self- recover fuse

Voltage channel protection: 250V over voltage protection.

Real-time Clock

Precision:	1min/month (Environment Temperature >0°C)
Clock battery Life:	2 years

Math Functions

Null, Min/Max/Average, dBm, dB, Limit Test (with TTL output)

Other Functions

Reading Hold, Ratio Measurement

High-speed Sampling

50kSa/s (In Datalog function)

Reading Resolution

480,000 Count, >5 3/4 digits

USB I/O Interface

USB Host, USB Device interface. It can support U-disk and USB printer.

Other I/O Interface

RS-232, GPIB (Selectable) support for SCPI command, LAN (Selectable)

General Specifications

Display:	256 x 64 pixels LCD to support multi-display, menu, multi-language help and
	waveform display.
Data Acquisition and Virtual:	Support Microsoft® Windows 98/Me, Windows 2000/XP
Power Supply:	100V/ 120V/ 220V/ 240V ±10%
Power Line Frequency:	45Hz to 66Hz
Power Consumption:	20VA peak
Operating Environment:	Full accuracy for 0 $^\circ \rm C$ to 55 $^\circ \rm C$, 95% R.H. at 40 $^\circ \rm C$ non-condensing
Storage Temperature:	-20°C to 70°C
Safety:	Measurement CAT II 300V, CAT I 1000V. Pollution Degree 1.
Vibration & Shock:	Mil-T-28800E, Type III, Class 5 (Sine Only)
Weight:	2.5kg
Size (H x W x D):	107.0mm x 231.6mm x 290.5m

Chapter 6 Appendix

Appendix A: DM3000 Series Accessories

Standard Accessories:

- A Power Cord that fits the standard of destination country.
- A USB Data Cable
- Two test Leads (black and red)
- A Quick Guide
- A Inspection Box (DMM External Connection Module) (DM3054/3064 only)
- A CD-ROM:

User's Guide

UltraSensor PC Software

UltraLogger PC Software

Optional Accessories:

- RS-232 Cable
- Kelvin Test Clip
- Inspection card extended line (DM3054/3064 only)

All the accessories (standard and optional) are available by contacting your local **RIGOL** office.

Appendix B: Warranty

RIGOL warrants that the products that it manufactures and sells will be free from defects in materials and workmanship for a period of three (3) years from the date of shipment from an authorized **RIGOL** distributor. If a product proves defective within the respective period, **RIGOL** will provide repair or replacement as described in the complete warranty statement.

To arrange for service or obtain a copy of the complete warranty statement, please contact your nearest **RIGOL** sales and service office.

RIGOL do not provide any other warranty items except the one being provided by this summary and the warranty statement. The warranty items include but not being subjected to the hint guarantee items related to tradable characteristic and any particular purpose.

RIGOL will not take any responsibility in cases regarding to indirect, particular and ensuing damage.

Appendix C: General Care and Cleaning

General Care

Do not store or leave the instrument in where the LCD display will be exposed to direct sunlight for long periods of time.



CAUTION: To avoid damage to the instrument, do not expose them to sprays, liquids, or solvents.

Cleaning

If this instrument requires cleaning, disconnect it from all power sources and clean it with a mild detergent and water. Make sure the instrument is completely dry before reconnecting it to a power source.

To clean the exterior surface, perform the following steps:

1. Remove loose dust on the outside of the instrument with a lint- free cloth. Take care to avoid scratching the clear plastic display filter.

2. Use a soft cloth dampened with water to clean the instrument.

NOTICE: To avoid damage to the surface of the instrument, do not use any abrasive or chemical cleaning agent.

Appendix D: Contact RIGOL

If you have any problem or requirement occurs when using our products, please contact **RIGOL** Technologies, Inc. or the local distributors.

In China: Please call Tel: (86-10) 8070 6688 Fax: (86-10) 8070 5070 Service & Support Hotline: **800 810 0002** 9:00 am–5: 00 pm from Monday to Friday

Or by e-mail: service@rigol.com

Or mail to: **RIGOL** Technologies, Inc. 156# CaiHe Village, ShaHe Town, ChangPing District, Beijing, China Post Code: 102206

Overseas: Contact the local RIGOL distributors or sales office.

For the latest product information and service, visit our website: www.rigolna.com